Quick-Starting Routers

BayRS Version 12.10
Site Manager Software Version 6.10
BCC Version 3.20

Part No. 117342-B Rev. 00
February 1998

Bay Networks

Bay Networks

4401 Great America Parkway
Santa Clara, CA 95054

8 Federal Street
Billerica, MA 01821

Copyright © 1998 Bay Networks, Inc.

All rights reserved. Printed in the USA. February 1998.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Bay Networks, Inc.

The software described in this document is furnished under a license agreement and may only be used in accordance with the terms of that license. A summary of the Software License is included in this document.

Trademarks

AN, BCN, BLN, BN, BNX, FRE, GAME, Nautica, Optivity, PPX, Quick2Config, and Bay Networks are registered trademarks and Advanced Remote Node, ANH, ARN, ASN, BayRS, BaySecure, BayStack, BCC, SPEX, System 5000, and the Bay Networks logo are trademarks of Bay Networks, Inc.

Microsoft, MS, MS-DOS, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

All other trademarks and registered trademarks are the property of their respective owners.

Restricted Rights Legend

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

Notwithstanding any other license agreement that may pertain to, or accompany the delivery of, this computer software, the rights of the United States Government regarding its use, reproduction, and disclosure are as set forth in the Commercial Computer Software-Restricted Rights clause at FAR 52.227-19.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, Bay Networks, Inc. reserves the right to make changes to the products described in this document without notice.

Bay Networks, Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Portions of the code in this software product may be Copyright © 1988, Regents of the University of California. All rights reserved. Redistribution and use in source and binary forms of such portions are permitted, provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that such portions of the software were developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from such portions of the software without specific prior written permission.

SUCH PORTIONS OF THE SOFTWARE ARE PROVIDED “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

In addition, the program and information contained herein are licensed only pursuant to a license agreement that contains restrictions on use and disclosure (that may incorporate by reference certain limitations and notices imposed by third parties).

Bay Networks, Inc. Software License Agreement

NOTICE: Please carefully read this license agreement before copying or using the accompanying software or installing the hardware unit with pre-enabled software (each of which is referred to as "Software" in this Agreement). BY COPYING OR USING THE SOFTWARE, YOU ACCEPT ALL OF THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT. THE TERMS EXPRESSED IN THIS AGREEMENT ARE THE ONLY TERMS UNDER WHICH BAY NETWORKS WILL PERMIT YOU TO USE THE SOFTWARE. If you do not accept these terms and conditions, return the product, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

1. License Grant. Bay Networks, Inc. ("Bay Networks") grants the end user of the Software ("Licensee") a personal, nonexclusive, nontransferable license: a) to use the Software either on a single computer or, if applicable, on a single authorized device identified by host ID, for which it was originally acquired; b) to copy the Software solely for backup purposes in support of authorized use of the Software; and c) to use and copy the associated user manual solely in support of authorized use of the Software by Licensee. This license applies to the Software only and does not extend to Bay Networks Agent software or other Bay Networks software products. Bay Networks Agent software or other Bay Networks software products are licensed for use under the terms of the applicable Bay Networks, Inc. Software License Agreement that accompanies such software and upon payment by the end user of the applicable license fees for such software.

2. Restrictions on use; reservation of rights. The Software and user manuals are protected under copyright laws. Bay Networks and/or its licensors retain all title and ownership in both the Software and user manuals, including any revisions made by Bay Networks or its licensors. The copyright notice must be reproduced and included with any copy of any portion of the Software or user manuals. Licensee may not modify, translate, decompile, disassemble, use for any competitive analysis, reverse engineer, distribute, or create derivative works from the Software or user manuals or any copy, in whole or in part. Except as expressly provided in this Agreement, Licensee may not copy or transfer the Software or user manuals, in whole or in part. The Software and user manuals embody Bay Networks' and its licensors' confidential and proprietary intellectual property. Licensee shall not sublicense, assign, or otherwise disclose to any third party the Software, or any information about the operation, design, performance, or implementation of the Software and user manuals that is confidential to Bay Networks and its licensors; however, Licensee may grant permission to its consultants, subcontractors, and agents to use the Software at Licensee's facility, provided they have agreed to use the Software only in accordance with the terms of this license.

3. Limited warranty. Bay Networks warrants each item of Software, as delivered by Bay Networks and properly installed and operated on Bay Networks hardware or other equipment it is originally licensed for, to function substantially as described in its accompanying user manual during its warranty period, which begins on the date Software is first shipped to Licensee. If any item of Software fails to so function during its warranty period, as the sole remedy Bay Networks will at its discretion provide a suitable fix, patch, or workaround for the problem that may be included in a future Software release. Bay Networks further warrants to Licensee that the media on which the Software is provided will be free from defects in materials and workmanship under normal use for a period of 90 days from the date Software is first shipped to Licensee. Bay Networks will replace defective media at no charge if it is returned to Bay Networks during the warranty period along with proof of the date of shipment. This warranty does not apply if the media has been damaged as a result of accident, misuse, or abuse. The Licensee assumes all responsibility for selection of the Software to achieve Licensee's intended results and for the installation, use, and results obtained from the Software. Bay Networks does not warrant a) that the functions contained in the software will meet the Licensee's requirements, b) that the Software will operate in the hardware or software combinations that the Licensee may select, c) that the operation of the Software will be uninterrupted or error free, or d) that all defects in the operation of the Software will be corrected. Bay Networks is not obligated to remedy any Software defect that cannot be reproduced with the latest Software release. These warranties do not apply to the Software if it has been (i) altered, except by Bay Networks or in accordance with its instructions; (ii) used in conjunction with another vendor's product, resulting in the defect; or (iii) damaged by improper environment, abuse, misuse, accident, or negligence. THE FOREGOING WARRANTIES AND LIMITATIONS ARE EXCLUSIVE REMEDIES AND ARE IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Licensee is responsible for the security of

its own data and information and for maintaining adequate procedures apart from the Software to reconstruct lost or altered files, data, or programs.

4. Limitation of liability. IN NO EVENT WILL BAY NETWORKS OR ITS LICENSORS BE LIABLE FOR ANY COST OF SUBSTITUTE PROCUREMENT; SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES; OR ANY DAMAGES RESULTING FROM INACCURATE OR LOST DATA OR LOSS OF USE OR PROFITS ARISING OUT OF OR IN CONNECTION WITH THE PERFORMANCE OF THE SOFTWARE, EVEN IF BAY NETWORKS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL THE LIABILITY OF BAY NETWORKS RELATING TO THE SOFTWARE OR THIS AGREEMENT EXCEED THE PRICE PAID TO BAY NETWORKS FOR THE SOFTWARE LICENSE.

5. Government Licensees. This provision applies to all Software and documentation acquired directly or indirectly by or on behalf of the United States Government. The Software and documentation are commercial products, licensed on the open market at market prices, and were developed entirely at private expense and without the use of any U.S. Government funds. The license to the U.S. Government is granted only with restricted rights, and use, duplication, or disclosure by the U.S. Government is subject to the restrictions set forth in subparagraph (c)(1) of the Commercial Computer Software—Restricted Rights clause of FAR 52.227-19 and the limitations set out in this license for civilian agencies, and subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause of DFARS 252.227-7013, for agencies of the Department of Defense or their successors, whichever is applicable.

6. Use of Software in the European Community. This provision applies to all Software acquired for use within the European Community. If Licensee uses the Software within a country in the European Community, the Software Directive enacted by the Council of European Communities Directive dated 14 May, 1991, will apply to the examination of the Software to facilitate interoperability. Licensee agrees to notify Bay Networks of any such intended examination of the Software and may procure support and assistance from Bay Networks.

7. Term and termination. This license is effective until terminated; however, all of the restrictions with respect to Bay Networks' copyright in the Software and user manuals will cease being effective at the date of expiration of the Bay Networks copyright; those restrictions relating to use and disclosure of Bay Networks' confidential information shall continue in effect. Licensee may terminate this license at any time. The license will automatically terminate if Licensee fails to comply with any of the terms and conditions of the license. Upon termination for any reason, Licensee will immediately destroy or return to Bay Networks the Software, user manuals, and all copies. Bay Networks is not liable to Licensee for damages in any form solely by reason of the termination of this license.

8. Export and Re-export. Licensee agrees not to export, directly or indirectly, the Software or related technical data or information without first obtaining any required export licenses or other governmental approvals. Without limiting the foregoing, Licensee, on behalf of itself and its subsidiaries and affiliates, agrees that it will not, without first obtaining all export licenses and approvals required by the U.S. Government: (i) export, re-export, transfer, or divert any such Software or technical data, or any direct product thereof, to any country to which such exports or re-exports are restricted or embargoed under United States export control laws and regulations, or to any national or resident of such restricted or embargoed countries; or (ii) provide the Software or related technical data or information to any military end user or for any military end use, including the design, development, or production of any chemical, nuclear, or biological weapons.

9. General. If any provision of this Agreement is held to be invalid or unenforceable by a court of competent jurisdiction, the remainder of the provisions of this Agreement shall remain in full force and effect. This Agreement will be governed by the laws of the state of California.

Should you have any questions concerning this Agreement, contact Bay Networks, Inc., 4401 Great America Parkway, P.O. Box 58185, Santa Clara, California 95054-8185.

LICENSEE ACKNOWLEDGES THAT LICENSEE HAS READ THIS AGREEMENT, UNDERSTANDS IT, AND AGREES TO BE BOUND BY ITS TERMS AND CONDITIONS. LICENSEE FURTHER AGREES THAT THIS AGREEMENT IS THE ENTIRE AND EXCLUSIVE AGREEMENT BETWEEN BAY NETWORKS AND LICENSEE, WHICH SUPERSEDES ALL PRIOR ORAL AND WRITTEN AGREEMENTS AND COMMUNICATIONS BETWEEN THE PARTIES PERTAINING TO THE SUBJECT MATTER OF THIS AGREEMENT. NO DIFFERENT OR ADDITIONAL TERMS WILL BE ENFORCEABLE AGAINST BAY NETWORKS UNLESS BAY NETWORKS GIVES ITS EXPRESS WRITTEN CONSENT, INCLUDING AN EXPRESS WAIVER OF THE TERMS OF THIS AGREEMENT.

Contents

About This Guide

Before You Begin xiv
ASN Terminology xv
Conventions xv
Acronyms xvi
Bay Networks Technical Publications xvii
Bay Networks Customer Service xvii
How to Get Help xviii
Bay Networks Educational Services xviii

Chapter 1
Overview of Quick-Start

Chapter 2
Preparing the Router for Quick-Start

Connecting a PC or Terminal Console 2-2
Connecting a PC 2-2
Connecting a Terminal Console 2-3
Connecting to the IP Network 2-4
Logging On to the Technician Interface 2-5
Using Technician Interface Commands 2-6
Reviewing the Installation Files 2-8
Booting with the ti.cfg File 2-10

Chapter 3
Preparing Your Network Information

Using the Quick-Start Worksheet 3-2
Using the Quick-Start ATM Worksheet 3-7
Using the Quick-Start Worksheet for WAN Protocols 3-12

Chapter 4
Using the Installation Script to Quick-Start a Router

Quick-Start Troubleshooting 4-4

Chapter 5
Using the BCC to Quick-Start a Router

Overview of the BCC 5-2
Essential BCC Commands 5-4
Quick-Starting Your Router with the BCC 5-5
Quick-Start Troubleshooting with the BCC 5-13

Chapter 6
Completing the Router Configuration

Selecting a Configuration Tool 6-1
Completing the Configuration Procedure 6-2
Communicating with the Router Remotely 6-3
Telnet Connections 6-3
Out-Of-Band Connections 6-4
Router Memory Card Distribution 6-4

Chapter 7
Securing the Router

Assigning a Password to the Technician Interface 7-2
Securing New Routers with the BCC or the Installation Script 7-3
Setting Global IP Access Policies with the BCC 7-3
Restricting Read/Write Access with SNMP Communities 7-3
Setting Secure Mode 7-4
Specifying Secure Mode 7-5
Authentication Failure Traps 7-6
Assigning SecurID to Telnet Connections 7-6
Turning Off FTP and Telnet on the Router 7-6
Using the Image Builder to Remove Services 7-6
Restricting Access to the HTTP Server 7-7
Configuring Data Encryption Services 7-7
Configuring RADIUS 7-8
Installing BaySecure FireWall-1 7-8

Chapter 8
Installing Site Manager on a PC

System Requirements 8-1
Updating TCP/IP, Network Adapters, and Drivers 8-2
Preparing the Network Control Panel 8-3
Testing TCP/IP 8-3
Loading and Starting Site Manager Software 8-4

Chapter 9
Installing Site Manager on a Workstation Running Windows NT

System Requirements 9-1
Preparing the Network Control Panel 9-2
Testing TCP/IP 9-2
Loading and Starting Site Manager Software 9-3

Chapter 10
Installing Site Manager on a SPARCstation

System Requirements 10-2
Setting Up the SPARCstation 10-2
Loading Site Manager Software 10-3
Mounting a CD-ROM Drive on SunOS and Solaris 10-3
Installing the Software 10-4
Unmounting the CD-ROM Drive 10-4
Setting Up Site Manager User Accounts 10-5
Verifying Site Manager Installation 10-6
Starting Site Manager 10-6
Starting Site Manager from SunNet Manager 10-8
Starting Site Manager from OpenView 10-9

Chapter 11
Installing Site Manager on an IBM Workstation

System Requirements 11-2
Loading Site Manager Software 11-2
Mounting a CD-ROM Drive 11-3
Installing the Software 11-3
Unmounting the CD-ROM Drive 11-4
Setting Up Site Manager User Accounts 11-4

Verifying Site Manager Installation 11-5
Starting Site Manager 11-6
Starting Site Manager from NetView for AIX 11-7

Chapter 12
Installing Site Manager on an HP 9000 Workstation

System Requirements 12-2
Loading Site Manager Software 12-2
Mounting a CD-ROM Drive 12-3
Installing the Software 12-3
Unmounting the CD-ROM Drive 12-4
Setting Up Site Manager User Accounts 12-4
Verifying Site Manager Installation 12-5
Starting Site Manager 12-6
Starting Site Manager from OpenView 12-7

Appendix A
Sample Installation Script

Appendix B
Sample ATM Installation Script

Index

Figures

Figure 3-1. Network Example for the Quick-Start Worksheet 3-3
Figure 3-2. Network Example for the Quick-Start ATM Worksheet 3-8
Figure 5-1. Configuring IP and RIP on an Ethernet Interface 5-3
Figure 8-1. Site Manager Window 8-5
Figure 9-1. Site Manager Window 9-5
Figure 10-1. Site Manager Window 10-7
Figure 10-2. Starting a Site Manager Session from SunNet Manager 10-8
Figure 10-3. Starting a Site Manager Session from OpenView 10-10
Figure 11-1. Site Manager Window 11-7
Figure 11-2. Starting a Site Manager Session from NetView 11-8
Figure 12-1. Site Manager Window 12-7
Figure 12-2. Starting a Site Manager Session from OpenView 12-8

Tables

Table 2-1. Initial Router Connectors to the IP Network 2-4
Table 2-2. Basic Technician Interface Commands 2-7
Table 2-3. Quick-Start Installation Files 2-9
Table 2-4. Router Software Images 2-10
Table 3-1. Quick-Start Worksheet 3-4
Table 3-2. Quick-Start ATM Worksheet 3-9
Table 3-3. Quick-Start Worksheet for WAN Protocols 3-12
Table 4-1. Installation Script Commands 4-2
Table 5-1. Essential BCC System and Navigation Commands 5-4

About This Guide

If you are responsible for activating a Bay Networks® router on an IP network, this guide can help you to configure the router's initial network interface. When you complete the Quick-Start installation procedure, the router will actively route IP traffic on your network.

You can use the Quick-Start installation script or the BCC to configure the initial IP interface over Ethernet on BN® and AN® routers. In this guide, you will find instructions for using both the BCC and the Quick-Start installation script to quick-start a router.

This guide also introduces you to router configuration and can help you to:

- Connect to the router's embedded tools:
  - -- The Technician Interface
  - -- The Bay Command Console (BCC™)
- Choose a router configuration tool.
- Secure your router.
- Install the Site Manager configuration tool on a PC or workstation.

The procedures in this book are intended primarily for new installations, but they are also used in the upgrade procedure. Before using this book as part of an upgrade, see the upgrade section of the *BayRS Version 12.10 Document Change Notice*.

.

If you want to	Go to
Review a summary of the Quick-Start procedure.	Chapter 1
Prepare your router for the Quick-Start procedure by connecting your router to a PC, terminal, or IP network and establish a Technician Interface session.	Chapter 2
Prepare network information for the Quick-Start procedure.	Chapter 3
Use the installation script to quick-start a router.	Chapter 4
Use the BCC to quick-start a router.	Chapter 5
Complete the router configuration.	Chapter 6
Secure your router.	Chapter 7
Install Site Manager on a PC running Windows 95.	Chapter 8
Install Site Manager on a workstation running Windows NT.	Chapter 9
Install Site Manager on a SPARCstation.	Chapter 10
Install Site Manager on an IBM workstation.	Chapter 11
Install Site Manager on an HP 9000 workstation.	Chapter 12
View a sample installation script.	Appendix A
View a sample ATM installation script.	Appendix B

Before You Begin

Before using this guide, you must complete the following procedures:

- Install the router (refer to the installation guide that came with your router):
  - -- *Installing and Maintaining BN Routers*
  - -- *Installing and Maintaining ASN Routers*
  - -- *Installing and Operating BayStack AN and ANH Routers*
  - -- *Installing and Operating BayStack ARN Routers*
  - -- *Quick Installation and Reference for the System 5000 Net Modules*
- Review the Read Me First and Release Notes documents for any changes to the Quick-Start instructions.

Following are other considerations for using Quick-Start:

- The Quick-Start procedure does not apply to the Nautica™ series of routers; see Nautica documentation for all instructions.
- For specific booting and installation script procedures for BayStack™ AN®, ANH™, and ARN™ routers, see *Configuring BayStack Remote Access*.
- For ASN network booting information, see *Connecting ASN Routers to a Network*.
- For ASN local booting requirements, such as using the **bconfig config local** and **boot** commands to allow the ASN to use its local configuration file, see *Installing and Maintaining ASN Routers*.

ASN Terminology

ASN routers use unique terminology to identify the location of their connectors. Four ASN nodes can be stacked together as a single router. You assign a slot number to each node using a dial on its rear panel. Each slot has four module positions where the net modules reside. You identify connector position by first specifying the slot and module numbers. For more information, see *Installing and Maintaining ASN Routers*.

Conventions

angle brackets (< >)	Indicate that you choose the text to enter based on the description inside the brackets. Do not type the brackets when entering the command. Example: if command syntax is **ping** *<ip_address>*, you enter **ping 192.32.10.12**
bold text	Indicates text that you need to enter, command names, and buttons in menu paths. Example: Enter **wfsm &**
	Example: Use the **dinfo** command.
	Example: ATM DXI > Interfaces > **PVCs** identifies the PVCs button in the window that appears when you select the Interfaces option from the ATM DXI menu.

brackets ([ ])	Indicate optional elements. You can choose none, one, or all of the options.
ellipsis points	Horizontal (. . .) and vertical (⋮) ellipsis points indicate omitted information.
italic text	Indicates variable values in command syntax descriptions, new terms, file and directory names, and book titles.
quotation marks (“ ”)	Indicate the title of a chapter or section within a book.
`screen text`	Indicates data that appears on the screen. Example: `Set Bay Networks Trap Monitor Filters`
separator (>)	Separates menu and option names in instructions and internal pin-to-pin wire connections. Example: Protocols > AppleTalk identifies the AppleTalk option in the Protocols menu. Example: Pin 7 > 19 > 20

Acronyms

BootP	Bootstrap Protocol
FDDI	Fiber Distributed Data Interface
FTP	File Transfer Protocol
HTTP	Hypertext Transfer Protocol
IP	Internet Protocol
ISO	International Organization for Standardization
ITU-T	International Telecommunication Union - Telecommunications (formerly CCITT)
LAN	local area network
MAC	media access control
NIC	network interface card
NVFS	nonvolatile file system
OSPF	Open Shortest Path First (Protocol)
PPP	Point-to-Point Protocol
PVC	Permanent Virtual Circuit
QENET	Quad Ethernet link module

RIP	Routing Information Protocol
SNMP	Simple Network Management Protocol
TCP/IP	Transmission Control Protocol/Internet Protocol
TFTP	Trivial File Transfer Protocol
WAN	wide area network

Bay Networks Technical Publications

You can now print technical manuals and release notes free, directly from the Internet. Go to *support.baynetworks.com/library/tpubs*. Find the Bay Networks products for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Using Adobe Acrobat Reader, you can open the manuals and release notes, search for the sections you need, and print them on most standard printers. You can download Acrobat Reader free from the Adobe Systems Web site, *www.adobe.com*.

Documentation sets and CDs are available through your local Bay Networks sales office or account representative.

Bay Networks Customer Service

You can purchase a support contract from your Bay Networks distributor or authorized reseller, or directly from Bay Networks Services. For information about, or to purchase a Bay Networks service contract, either call your local Bay Networks field sales office or one of the following numbers:

Region	Telephone number	Fax number
United States and Canada	800-2LANWAN; then enter Express Routing Code (ERC) 290, when prompted, to purchase or renew a service contract 978-916-8880 (direct)	978-916-3514
Europe	33-4-92-96-69-66	33-4-92-96-69-96
Asia/Pacific	61-2-9927-8888	61-2-9927-8899
Latin America	561-988-7661	561-988-7550

Information about customer service is also available on the World Wide Web at *support.baynetworks.com.*

How to Get Help

If you purchased a service contract for your Bay Networks product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

If you purchased a Bay Networks service program, call one of the following Bay Networks Technical Solutions Centers:

Technical Solutions Center	Telephone number	Fax number
Billerica, MA	800-2LANWAN	978-916-3514
Santa Clara, CA	800-2LANWAN	408-495-1188
Valbonne, France	33-4-92-96-69-68	33-4-92-96-69-98
Sydney, Australia	61-2-9927-8800	61-2-9927-8811
Tokyo, Japan	81-3-5402-0180	81-3-5402-0173

Bay Networks Educational Services

Through Bay Networks Educational Services, you can attend classes and purchase CDs, videos, and computer-based training programs about Bay Networks products. Training programs can take place at your site or at a Bay Networks location. For more information about training programs, call one of the following numbers:

Region	Telephone number
United States and Canada	800-2LANWAN; then enter Express Routing Code (ERC) 282 when prompted 978-916-3460 (direct)
Europe, Middle East, and Africa	33-4-92-96-15-83
Asia/Pacific	61-2-9927-8822
Tokyo and Japan	81-3-5402-7041

Chapter 1
Overview of Quick-Start

The Quick-Start procedure boots your router locally and configures its initial interface to an IP network. To complete the Quick-Start procedure, follow these steps:

1. **Connect a PC or ASCII console to the router.**

   Connect a PC or a terminal to the router's console port to access the Technician Interface (Chapter 2).

2. **Connect the router to the IP network.**

   Connect a cable between the router and the IP network (Chapter 2).

3. **Establish a Technician Interface session.**

   Use the Technician Interface to run the installation script or to start the BCC (Chapter 2).

4. **Boot the router with the *ti.cfg* file to prepare it for Quick-Start (Chapter 2).**

5. **Prepare your network information using the appropriate worksheet (Chapter 3).**

6. **Decide whether to quick-start the router with:**

   - The installation script (*install.bat*)

     The installation script starts all supported routers. Run the installation script as described in Chapter 4, "Using the Installation Script to Quick-Start a Router."

   - BCC commands

     You can also quick-start the router using BCC commands for an initial IP connection over Ethernet for BN and AN routers (Chapter 5).

7. **Complete your configuration.**

   Review the general procedure (Chapter 6) you need to follow to complete the router's configuration using one or more of the following Bay Networks tools:

   - Bay Command Console
   - Site Manager
   - NETarchitect
   - Quick2Config®
   - Technician Interface
   - HTTP Server

8. **Secure your router.**

   Review the security mechanisms you can implement for your router (Chapter 7).

9. **Install Site Manager.**

   If you choose Site Manager as your configuration tool, this guide provides installation instructions. Follow the instructions in the appropriate chapter to install Site Manager software on one of the following platforms:

   - PC (Chapter 8)
   - Workstation running Windows NT (Chapter 9)
   - SPARCstation (Chapter 10)
   - IBM workstation (Chapter 11)
   - HP 9000 workstation (Chapter 12)

Chapter 2
Preparing the Router for Quick-Start

To prepare your router for the Quick-Start installation, you make the router's physical connections, access the router's command-line interface, and boot with the proper installation file.

This chapter contains the following topics:

Topic	Page
Connecting a PC or Terminal Console	2-2
Connecting to the IP Network	2-4
Logging On to the Technician Interface	2-5
Using Technician Interface Commands	2-6
Reviewing the Installation Files	2-8
Booting with the ti.cfg File	2-10

Connecting a PC or Terminal Console

You make a local terminal connection to your router, using a terminal program on a PC or a terminal console, to access the router's Technician Interface. At the Technician Interface prompt, you enter the commands for the Quick-Start procedure.

Connecting a PC

To connect a PC to the router:

1. **Set the communications parameters in your terminal-emulation program.**

   For example, to set the HyperTerminal program that comes with Microsoft® Windows® 95:

   a. **From the Start Menu, choose Programs > Accessories > HyperTerminal.**

   b. **Double-click on Hypertrm.exe.**

   c. **In the Connection Description window, enter a name for the connection and choose an icon for the terminal program to display.**

   d. **Click on OK.**

   e. **In the Phone Number window, scroll through the Connect Using Box and choose the COM port with the cable connection to the router.**

      This procedure sets up the terminal program to make a direct connection, instead of a phone connection.

   f. **Click on OK.**

   g. **Choose Settings** > **Communications.**

   h. **Configure the port settings for your COM port as follows:**

      - Bits per second = 9600
      - Data bits = 8
      - Parity = none
      - Stop bits = 1
      - Flow control = Xon/Xoff

i. **Click on OK.**

j. **Choose Files > Properties > Settings.**

k. **Choose the Terminal Keys option for the Function, arrow, and ctrl keys option.**

This enables Windows 95 to use terminal keyboard combinations when running the installation script.

Note: If you set this function to Windows keys, you will not be able to use keyboard combinations such as Control-C when running the installation script.

l. **Click on OK.**

m. **Choose File > Save to save your settings.**

2. **Connect the cable from the console port of the router to the COM port you selected in the terminal emulation program.**

See the installation guide that came with your router for the specific cable requirements for your router.

3. **Turn on the router to complete the internal diagnostics and startup.**

When the router boots, the screen displays the Technician Interface `Login` prompt. You are now ready to enter Technician Interface commands (see "Logging On to the Technician Interface on page 2-5).

Connecting a Terminal Console

To connect a terminal console (terminal) to the router:

1. **Set the operating parameters of the terminal console as follows:**

- Baud rate = 9600
- Stop bits = 1
- Parity = none
- Data bits = 8

2. **Connect the cable from the terminal console to the console port of the router.**

   See the installation guide that came with your router for the specific cable requirements for your router. For example, for the BCN, you insert the male end of the cable (Order No. 7525) into the console port of the System Resources Module-Link (SRM-L) Module in slot 7.

3. **Turn on the router to complete the internal diagnostics and startup.**

   When the router boots, the screen displays the Technician Interface `Login` prompt. You are now ready to enter Technician Interface commands (see "Logging On to the Technician Interface on page 2-5).

Connecting to the IP Network

When you obtained your router, you also received a cable to connect the router to your IP network.

To connect the cable from the router to the IP network:

1. **Connect the cable to a router connector.**

   Table 2-1 lists the standard connectors (also called *ports*) for connecting the router to the IP network.

Table 2-1. Initial Router Connectors to the IP Network

Bay Networks Router	Default Connector
ASN	Any connector on any net module, excluding the Stack Packet Exchange (SPEX) module
BayStack AN, ANH, and ARN	See the installation guide.
BLN, BCN	First connector on the first link module (slot 2)
System 5000 net modules	See the installation guide.

You can configure any connector on a router for the initial IP connection by specifying the slot and connector when you quick-start the router with the installation script (Chapter 4) or the BCC (Chapter 5).

For information about the location of the connector on your router, see the installation guide that came with your router.

2. **Connect the cable to the network connector.**

   The network connection depends on your LAN or WAN configuration. For general information about cables, see the *Cable Guide.*

Logging On to the Technician Interface

When you connect to a Bay Networks router and establish a terminal session, the Technician Interface `Login` prompt appears. The Technician Interface is a command-line interface provided with every Bay Networks router.

You use the Technician Interface to:

- View the router's file system.
- Run the Quick-Start installation script.
- Access the BCC.
- Enter commands to manage your router and its MIB variables.

To log on to the Technician Interface, enter:

Manager

The Technician Interface displays a prompt consisting of the slot where the Technician Interface is running, followed by the $ prompt, for example:

```
2$
```

To log off the Technician Interface, enter:

logout

Using Technician Interface Commands

To complete the Quick-Start procedure, you must enter several Technician Interface commands. Table 2-2 provides a list of the basic Technician Interface commands you will need. You can also use the Help system to view available commands.

Technician Interface commands, passwords, and file names are case-sensitive. You must press the Return key to execute a Technician Interface command.

To display all Technician Interface commands in a brief table, enter:

help help

To display all Technician Interface commands and their associated syntax requirements, enter

help

Use this command when you know the command's function, but do not know the command name or its syntax. Enter the **more on** command to control Help screen scrolling.

To display online Help for a specific Technician Interface command, use the **help** command, as follows:

help [<*command*>]

When you enter **help**, followed by a space and the name of a command, the console displays a detailed description of the command, along with its syntax requirements. For example, when you enter **help date**, the console displays a detailed description of the **date** command.

Table 2-2. Basic Technician Interface Commands

Command	Function
cd	Changes the active volume
compact	Reallocates file space on a memory card
copy	Copies a file from one volume to another or to the same volume
delete	Deletes a file from a volume
dinfo	Displays the volume number, status, and space for each volume
dir	Displays all files on a volume
format	Erases any existing files on a volume and formats the volume
more on	Enables the more mode; pauses the display and prompts you to continue when a screen fills
more off	Disables the more mode; the screen scrolls automatically without prompting you
partition	Partitions file system media into two volumes
ping -ip <*IP_address*>	Pings an IP address (for example, 192.*xx.xxx.xx*) on an IP network
save	Saves the current software configuration, aliases, or events to a file
tftp	Transfers a file to or from the router
type	Displays the contents of a file

Reviewing the Installation Files

Your router stores its files on memory cards. The nonvolatile file system (NVFS) running in the router reads and writes to the memory cards for file storage. After establishing a Technician Interface session, you are ready to display the Quick-Start installation files and verify that they are available.

To display and verify the installation files:

1. **Find the memory card location.**

   Identify the volume where the router's memory card (volume) resides by entering:

   dinfo

   The Technician Interface displays a table showing the memory card's volume number and memory statistics. The volume number is equivalent to the slot on the router. BCNs and BLNs can contain multiple memory cards -- one memory card per slot.

2. **Display the names of the files in the volume by entering:**

   dir *<slot_number>***:**

   <slot_number> is the slot location of the memory card. Include the colon (:) after the slot number.

   For example,

```
TBLN>dir 2:

 Volume in drive 2: is
 Directory of 2:

File Name     Size          Date          Day    Time
-----------------------------------------------------------
bn.exe        3513155       01/10/98      Mon.   10:03:45
config        132           01/10/98      Mon.   10:03:45
ti.cfg        132           01/10/98      Mon.   10:03:45
install.bat   204323        01/10/98      Mon.   10:03:45
debug.al      12319         01/10/98      Mon.   10:03:45
bcc.help      165960        01/10/98      Mon.   10:03:45

8388608 bytes - Total size
4492587 bytes - Available free space
945812 bytes  - Contiguous free space
```

3. **Note the available free space on the router volume.**

   You should always make sure you have enough space on the volume to hold any new files you create or copy.

   In the following steps, you verify that the correct router software, configuration, and installation files are available. These steps may not be necessary for new routers with the files already installed, although they will help you become familiar with your router's files.

4. **Verify that the directory lists the Quick-Start installation files shown in Table 2-3.**

Table 2-3. Quick-Start Installation Files

File Name*	File Type
bn.exe	Bootable router software image (see Table 2-4 for other router images)
config	Default configuration file
debug.al	Alias file
install.bat	Quick-Start installation script file
ti.cfg	Initial configuration file
bcc.help	BCC Help file

* All router files must belong to the same software version. Other files may be in the directory. Router file names may vary slightly; for example, System 5000 net modules use the *ti_5000.cfg* file.

5. **Verify that all router files belong to the same software version.**

   For example, you should not use a Version 11.00 *install.bat* script with BayRS Version 12.10 files.

6. **Verify that the directory holds the correct software image for your router (Table 2-4).**

Table 2-4. Router Software Images

Router	Software Image
AN and ANH*	an.exe
ARN*	arn.exe
ASN*	asn.exe
BCN	bn.exe
BLN	bn.exe
System 5000 net modules	s5000.exe

* See the Quick-Start restrictions for these routers in "About This Guide."

Booting with the ti.cfg File

To prepare new routers for initial configuration, you first boot the router with the *ti.cfg* file. The *ti.cfg* file is an initial configuration file containing only the minimal information needed to boot the router. You then run the installation script or use BCC commands to add configuration information about your first IP interface.

When you complete the Quick-Start procedure, you save your new configuration information to a file called *startup.cfg*. Do not edit the *ti.cfg* file or overwrite it with another configuration file.

If the installation fails, you must reboot the router with *ti.cfg* before retrying the Quick-Start procedure. You also should boot with the *ti.cfg* file if:

- The router is currently booted from a configuration file other than *ti.cfg* and you want to reconfigure the router from scratch.
- You change the initial IP connector (port) that you use to communicate with the configuration workstation.

To boot the router using the *ti.cfg* file:

1. **Enter the following command:**

   boot *<slot_number>*:*<image_file>* *<slot_number>*:**ti.cfg**

   <slot_number> identifies the slot where the files reside on the router and *<image_file>* is the software image for your router (see Table 2-4).

   For example, enter:

   boot 2:bn.exe 2:ti.cfg

   The router boots and executes its startup procedure.

2. **Establish a new Technician Interface session by entering:**

   Manager

In Chapter 3, "Preparing Your Network Information," you will collect and record the network information needed to complete the Quick-Start procedure.

Chapter 3
Preparing Your Network Information

This chapter provides a series of worksheets to help you collect the information you will need to quick-start the router using either the installation script or BCC commands. This chapter provides the following information:

Topic	Page
Using the Quick-Start Worksheet	3-2
Using the Quick-Start ATM Worksheet	3-7
Using the Quick-Start Worksheet for WAN Protocols	3-12

Whether you use the installation script or BCC commands, you quick-start the router as follows:

1. Select an interface and supply information about its connector and circuit.
2. Configure IP on the interface.
3. Enable these global communication services (optional):
   - SNMP
   - TFTP
   - FTP
   - Telnet
   - HTTP Server
4. Save the configuration file as *startup.cfg*.
5. Test the initial configuration by pinging the workstation you will use to continue the configuration.

Many BCC commands and installation script prompts provide default values. Accept the default values unless you have a reason to make a change. You can skip optional steps and steps that do not apply to your network.

Using the Quick-Start Worksheet

The Quick-Start Worksheet (Table 3-1) provides a summary of the information you need to complete the Quick-Start procedure. The information can be applied to either the installation script or BCC commands.

Most customers configure their initial IP interface on Ethernet. The Quick-Start Worksheet assumes an Ethernet interface in the connector and circuit fields. For interfaces other than Ethernet, substitute the appropriate connector and circuit information and complete the rest of the worksheet beginning with the IP Configuration section.

For other interfaces, see the appropriate configuration guide for more information about connector and circuit requirements:

- *Configuring Ethernet, FDDI, and Token Ring Services*
- *Configuring WAN Line Services*

If you plan to use the Quick-Start procedure to configure an ATM interface, go to "Using the Quick-Start ATM Worksheet" on page 3-7. If you plan to use the Quick-Start procedure to configure an interface (such as synchronous) that supports a WAN protocol, see "Using the Quick-Start Worksheet for WAN Protocols" on page 3-12.

Figure 3-1 shows a sample Ethernet network used in the examples in the Quick-Start Worksheet. See Appendix A, "Sample Installation Script," for an example of the script execution.

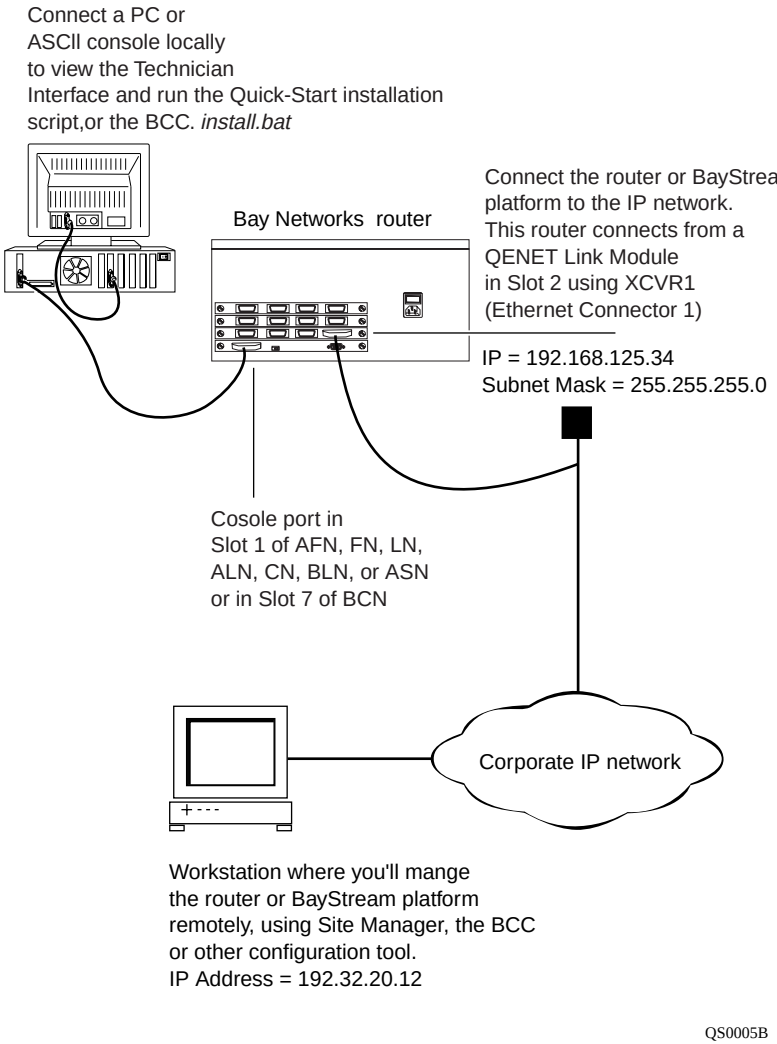
Connect a PC or
ASCII console locally
to view the Technician
Interface and run the Quick-Start installation
script,or the BCC. *install.bat*
Bay Networks router
Connect the router or BayStream
platform to the IP network.
This router connects from a
QENET Link Module
in Slot 2 using XCVR1
(Ethernet Connector 1)
IP = 192.168.125.34
Subnet Mask = 255.255.255.0
Cosole port in
Slot 1 of AFN, FN, LN,
ALN, CN, BLN, or ASN
or in Slot 7 of BCN
Corporate IP network
Workstation where you'll mange
the router or BayStream platform
remotely, using Site Manager, the BCC
or other configuration tool.
IP Address = 192.32.20.12
QS0005B

Figure 3-1. Network Example for the Quick-Start Worksheet

Table 3-1. Quick-Start Worksheet

Network Information	Example	Your Information
Physical Connector Information		
Number of the slot holding the link module for the first network interface **Note:** For the ASN, also provide the module number (for example, module 1).	Slot 2 (QE/NF link module)	
Number of the connector (port) on the link module	Ethernet connector 1 (XCVR1)	
Circuit Information		
Circuit name (default is provided) **Note:** Substitute circuit information for interfaces other than Ethernet.	E21	
IP Configuration		
IP address of this initial interface (Advanced users only: *install.bat* supports unnumbered interfaces.)	192.168.125.34	
Subnet mask of this initial interface	255.255.255.0	
If this interface resides on the same local area network (LAN) as the workstation you will use to connect to the router, you have completed the initial IP configuration. Proceed to add global services. If the workstation resides on a different network, add an IP routing protocol first.	No	
IP Routing Protocol Information		
Choose an IP routing protocol if the configuration workstation is located on another network: • RIP • OSPF • Static Route See the following sections for details on the IP routing protocol you choose to configure.	RIP	

(continued)

Table 3-1. Quick-Start Worksheet *(continued)*

Network Information	Example	Your Information
RIP Configuration		
Should RIP listen to the default route to the network or subnet where the workstation is located?	Yes	
OSPF Configuration		
OSPF router IP address (if different from this interface)	192.32.156.7	
OSPF area address	0.0.0.0	
Should you enable Simple Password Authentication?	No	
MTU size for OSPF packets (Default, Ethernet Size, User-defined MTU)	Default	
OSPF interface type (Broadcast, NBMA, Point to Point, Point to MultiPoint) **Note:** If there is an existing OSPF configuration on the network, you must set matching values for the interface type, Hello Interval, and Dead Interval.	Broadcast (default)	
Hello interval (in seconds)	10 (default)	
Router dead interval (in seconds)	40 (default)	
Router priority	1 (default)	
Poll interval	120 (default)	
If you are configuring OSPF neighbors, add the IP address for each neighbor. **Note:** Neighbors are defined only if the OSPF interface type is NBMA. Sample format: 192.32.156.8		
Static Route Configuration		
Destination network	192.32.90.1	
Destination network mask	255.255.255.0	
Next-hop address that is in the same subnet as the initial IP interface	192.32.4.99	

(continued)

Table 3-1. Quick-Start Worksheet *(continued)*

Network Information	Example	Your Information
Global Services Information These steps set communication services globally for all the interfaces on the router. You can increase router security by restricting SNMP communities, FTP, and Telnet. See Chapter 7, "Securing the Router."		
Enable SNMP Community Management?	Yes	
For each SNMP community, decide whether it is public or private, its read-write access, and IP address of the manager.	public, read-only, 192.32.20.12	
Enable TFTP?	Yes	
Default volume where TFTP transactions will take place	2	
Enable FTP?	Yes	
Default volume where FTP transactions will take place	2	
Enable Telnet?	Yes	
Enable Telnet client?	Yes	
Enable Telnet server?	Yes	
Enable the HTTP (Web) server? Provides embedded Web tools on the router to view device information. BCC users should enable the HTTP Server with Site Manager after quick-starting the router.	Yes	
Workstation Information		
IP address of the workstation you will use to configure the router	192.32.20.12	

Using the Quick-Start ATM Worksheet

The Quick-Start installation script allows you to configure initial routing services for the ATM Routing Engine link module in Bay Networks routers. You can then use Site Manager to refine your configuration.

Use the Quick-Start installation script to add ATM to the router by:

- Defining the physical link
- Defining an ATM service record
- Creating an ATM circuit
- Adding the initial virtual circuit to the service record (PVCs only)
- Enabling the IP protocol on the ATM service record

The Quick-Start ATM Worksheet (Table 3-2) contains only the ATM connector, circuit, and service record information. After you specify the ATM interface, the Quick-Start script prompts you for the same information found in Table 3-1, beginning with the IP Configuration section.

Figure 3-2 shows a sample ATM network used in the examples in the ATM Quick-Start Worksheet.

See Appendix B, "Sample ATM Installation Script," for an example of the script execution.

For more information about the parameters set in the script, see *Configuring ATM Services*.

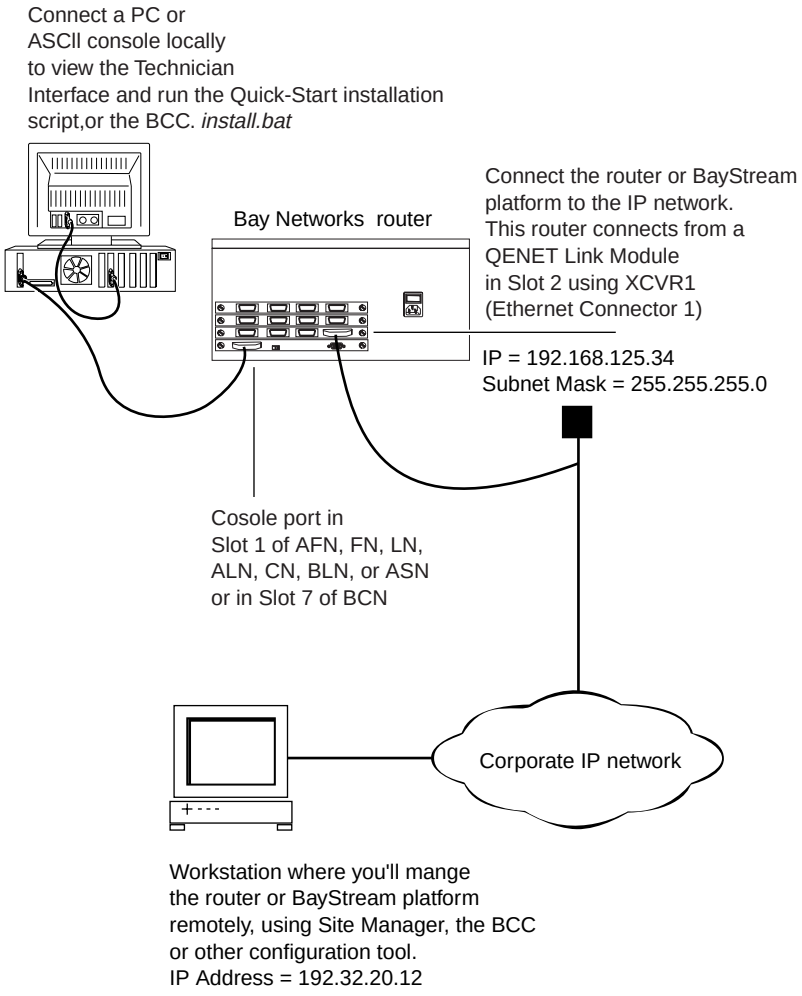
Connect a PC or
ASCII console locally
to view the Technician
Interface and run the Quick-Start installation
script,or the BCC. *install.bat*
Bay Networks router
Connect the router or BayStream
platform to the IP network.
This router connects from a
QENET Link Module
in Slot 2 using XCVR1
(Ethernet Connector 1)
IP = 192.168.125.34
Subnet Mask = 255.255.255.0
Cosole port in
Slot 1 of AFN, FN, LN,
ALN, CN, BLN, or ASN
or in Slot 7 of BCN
Corporate IP network
Workstation where you'll mange
the router or BayStream platform
remotely, using Site Manager, the BCC
or other configuration tool.
IP Address = 192.32.20.12

Figure 3-2. Network Example for the Quick-Start ATM Worksheet

Table 3-2. Quick-Start ATM Worksheet

Network Information	Example	Your Information
ATM Physical Link Information		
Slot number of the link module	4 (ATMC_OC3MM)	
Connector number [1]:	1 (ATM1)	
Choosing a Service Record Type		
Enter ATM Service Record Type [1]: 1. ATM PVC 2. ATM LAN Emulation 3. ATM Logical IP Subnet Continue with the information for your service record type.	1 (ATM PVC)	
PVC Service Record Type		
Enter encapsulation type [1]: 1. LLC/SNAP (RFC 1483) 2. NLPID (RFC 1490)	2 (NLPID (RFC 1490))	
For VPI, enter a number from 0 to 255. The VPI (virtual path identifier) number of the initial PVC identifies the virtual path of the PVC. The VPI is part of the cell header. The header can contain a maximum of 8 VPI bits. This bit range allows for path identifiers from 0 through 255.	0	
For VCI, enter a valid number in these ranges: - ARE module in a BLN/BCN router: 32 - 65535 - Model 5780 ATM VNR in a Model 5000AH chassis: 130 - 2047 - Model 5782 ATM VNR in a Model 5000BH chassis: 130 - 2047 The VCI (virtual channel identifier) number of the initial PVC identifies the virtual channel portion of the PVC. The VCI is part of the cell header and has a length of 16 bits.	200	

(continued)

Table 3-2. Quick-Start ATM Worksheet *(continued)*

Network Information	Example	Your Information
Enter circuit name: (The script recommends a default name.)	ATMSR_1404101.3	
LAN Emulation Service Record Type		
Signaling Version [1]: 1. UNI3.0 2. UNI3.1	2 (UNI3.1)	
Do you want Auto Generation of the ATM address? (y/n) [y]: If you choose Auto Generation, router software will use a combination of the MAC address and the network prefix obtained from the server to generate a unique ATM address. If you do not choose Auto Generation, enter a 7-byte User Part (Mandatory) and a 13-byte Net Prefix (Optional) to be combined into a 20-byte ATM address. Enter User Part (Mandatory), 7 bytes: Enter Net Prefix (Optional), 13 bytes:	No 12345677654321 39000000000000000000000000	
Choose the Emulated LAN Name. Press Return to accept the default ELAN name or type the name of a previously configured ELAN for this LAN Emulation client to join.	AAA	
Choose Emulated LAN Type [1] 1. Unspecified 2. IEEE8023 3. IEEE8025	3 (IEEE8025)	
Enter circuit name. (The script recommends a default name.)	ATMSR_1404101.5	

(continued)

Table 3-2. Quick-Start ATM Worksheet *(continued)*

Network Information	Example	Your Information
Logical IP Service Record Type		
Signaling Version [1]: 1. UNI3.0 2. UNI3.1	1 (UNI3.0)	
Do you want Auto Generation of the ATM address? (y/n) [y]: If you choose Auto Generation, router software will use a combination of the MAC address and the network prefix obtained from the server to generate a unique ATM address. If you do not choose Auto Generation, enter a 7-byte User Part (Mandatory) and a 13-byte Net Prefix (Optional) to be combined into a 20-byte ATM address. Enter User Part (Mandatory), 7 bytes: Enter Net Prefix (Optional), 13 bytes:	No 12345677654321 39000000000000000000000000	
Choose the ATM ARP Mode. -Client Mode [Default] -Server Mode If you choose the default (Client Mode), you must enter the ARP Server ATM Address. Would you like to accept Client Mode for ATM ARP? (y/n) [y]:	 Yes	
Enter ARP Server ATM Address in hexadecimal format, omitting leading 0x/0X. Enter Network Prefix (Mandatory), 13 bytes: Enter User Part (Mandatory), 7 bytes:	 39000000000000000000000000 11111111111111	
Refer to Table 3-1, the Quick-Start Worksheet, to continue the initial configuration.		

Using the Quick-Start Worksheet for WAN Protocols

Use the Quick-Start Worksheet for WAN Protocols (Table 3-3) to record the information you will need to enable frame relay, PPP, or SMDS using the installation script. (Using the script to enable WAN protocols is recommended for experienced users only.) Normally you implement these protocols using Site Manager or another configuration tool. The script prompts for a WAN protocol if you select a connector that supports WAN protocols, for example, synchronous.

For more information about the WAN protocol parameters, see these guides:

- *Configuring Frame Relay Services*
- *Configuring PPP Services*
- *Configuring SMDS*

Table 3-3. Quick-Start Worksheet for WAN Protocols

Network Information	Example	Your Information
WAN Information Advanced users can use the Quick-Start script to initially configure frame relay, PPP, or SMDS. See the configuration guides for more information about the parameters.		
Frame Relay Information (To enable frame relay on a synchronous connector on this initial IP interface)		
Enable frame relay on the interface?	Yes	
Management protocol that communicates with the frame relay network	LMI	
DLCI addressing types	ADDR Q.922	
Frame relay address field length	2 bytes	
Frame relay PVC ID	30	

(continued)

Table 3-3. Quick-Start Worksheet for WAN Protocols *(continued)*

Network Information	Example	Your Information
PPP Information (To enable PPP on a synchronous connector on this initial IP interface)		
Enable PPP on the interface?	Yes	
IP address of peer connection	192.32.4.2	
Enable PPP Echo protocol?	Yes	
Number of seconds between transmission of echo requests	10	
Acceptable loss of Echo-Reply packets	3	
Enable local authentication protocol?	Yes	
Local PAP ID for this interface	192.32.4.1	
Local PAP password (optional)	lpwd	
Authentication protocol enabled on remote peer?	Yes	
Remote peer PAP password	rpwd	
Enable Link Quality Reporting (LQR) protocol?	Yes	
Enable use of remote peer's LQR timer?	Yes	
Minimum acceptable percentage of inbound packets	90	
Minimum acceptable percentage of outbound packets	90	
SMDS Information (To enable SMDS on a synchronous connector on this initial IP interface)		
Enable SMDS on the interface?	Yes	
Individual address	C1617555433FFFF	
Group address	E16175556667FFFF	
ARP address	E16175550000FFFF	

Chapter 4
Using the Installation Script to Quick-Start a Router

The *install.bat* script establishes an initial IP network interface on the router so that your router can communicate with the workstation from which you will manage the router.

The script prompts you to enter the network information that dynamically configures the initial IP interface. (See Appendix A for a sample script execution.) You configure subsequent interfaces with Site Manager, the BCC, or another router configuration tool.

Note: You can use either the BCC or the *install.bat* script to establish an initial IP interface. For information about using the BCC, see Chapter 5, "Using the BCC to Quick-Start a Router."

Following are important points to remember about running the script:

- You must boot the router with the *ti.cfg* file before running the script.
- Do not overwrite the *ti.cfg* file.
- Save your initial configuration file as *startup.cfg*.
- After the script completes successfully, *do not* reboot your router.
- If the script fails, see "Quick-Start Troubleshooting" on page 4-4.
- If you must rerun the script, first reboot the router with the *ti.cfg* file.
- Immediately after running the script, secure your router. For more information, see Chapter 7, "Securing the Router."

Before you start the script, review Table 4-1 for the commands you use to run the script.

Table 4-1. Installation Script Commands

Script Action	Your Input	Result
Accept the default value.	Press Return.	Accept the default value the script displays in brackets, for example, `[E21]`.
Repeat a step to make a correction.	Press Control-C.	The script displays this prompt: `Terminate script y/n?` Enter **n** to continue the script and reenter the current step by deleting the information you added for that step.
	Press Control-C.	The script displays this prompt: `Terminate script y/n?` Enter **y** to terminate the script and return to the Technician Interface prompt. Before rerunning the Quick-Start installation script, reboot the router using the *ti.cfg* file.

After booting the router with the *ti.cfg* file and establishing a new Technician Interface session, you are ready to run the *install.bat* installation script.

To run the script:

1. **Access the volume where the installation files reside by entering:**

   cd <*volume_number*>**:**

   Include the colon (:) after the volume number.

   For example, enter **cd 2:**

2. **Start the installation script by entering:**

   run install

   Many steps in the installation script provide default values you should accept. Some steps are optional for your network requirements.

   Refer to your Quick-Start worksheet (see Chapter 3) as you respond to the prompts.

3. **Select a slot and connector on the router.**

4. **Configure IP on the interface.**

5. **Enable global services for**
   - SNMP
   - TFTP
   - FTP
   - Telnet
   - HTTP

Note: You can enable the HTTP Server on the router to access embedded Web tools to view device information. For more information, see *Managing Your Network Using the HTTP Server.*

6. **Review the configuration.**

   The script displays a summary of the newly configured IP interface.

7. **Save the configuration file as *startup.cfg.***

   Accept the default name, *startup.cfg.* You save this initial IP configuration to the file to maintain a permanent copy for the next time you reboot the router.

   Do not save your configuration file as *ti.cfg*. That file should remain in its original, unconfigured state.

   Do not save your file as *config.* Use that file name only after you have fully tested a configuration file. The router uses *config* as the default boot file and will automatically boot with it if another file is not specified.

8. **Test the initial IP interface.**

   The router tests the IP interface configuration by pinging its own interface. If successful, it prompts you for the IP address of the workstation you will use to configure the router and attempts to ping it.

   If the ping test is not successful, the cause may be network problems that have nothing to do with the Quick-Start installation. To troubleshoot the network problems, you can leave the ping test by typing **Q**. See "Quick-Start Troubleshooting" on page 4-4 for more information.

   If the ping test is successful, the initial IP interface is enabled and the script displays this message:

   ```
   Quick-Start Installation Completed
   ```

   The Technician Interface prompt appears.

You now have a configuration file named *startup.cfg* on the router volume that contains your initial interface. The configuration is active in the router's memory.

Caution: Do not reboot the router after successfully completing the Quick-Start procedure. By default, the router reboots with the file named *config*, not the *startup.cfg* file you just created. See Chapter 6, "Completing the Router Configuration," for instructions on testing the *startup.cfg* file before you save it as *config*.

Bay Networks recommends that you immediately secure your router to prevent unauthorized access. See Chapter 7, "Securing the Router," for information.

Quick-Start Troubleshooting

If the router cannot ping the workstation during the Quick-Start procedure, check the following:

- If the router was able to ping its own interface, and the script prompted you for the interface of the workstation, you probably have a successful installation. To be sure, continue with the remaining checks.
- Check the physical connections.
- If the workstation is a PC, a supported TCP/IP stack must be running for a successful ping. See Chapter 8, "Installing Site Manager on a PC," for information about TCP/IP stacks, adapters and drivers.
- Verify the IP address of the router. Enter the **show ip circuits** command at the Technician Interface prompt to make sure that the physical interface is up and that the IP address is correct. For more information about the **show** command, see *Using Technician Interface Scripts*.
- Verify the IP address and subnet mask address of the configuration workstation.

- If the workstation is on a different network, verify that routing is active. Enter the **show ip routes** command at the Technician Interface prompt to examine the routing table and verify that there is a route or a default route to the network where the workstation is located. For more information about the **show** command, see *Using Technician Interface Scripts.*

Note: If the installation failed and you must rerun the script, first reboot the router with the *ti.cfg* file.

Chapter 5
Using the BCC to Quick-Start a Router

The Bay Command Console (BCC) is a command-line interface to your Bay Networks router. You can configure and manage your BN and AN routers using BCC commands. This chapter tells you how to use the BCC to quick-start a BN or AN router and produce an initial configuration file called *startup.cfg*. Refer to the following topics:

Topic	Page
Overview of the BCC	5-2
Essential BCC Commands	5-4
Quick-Starting Your Router with the BCC	5-5
Quick-Start Troubleshooting with the BCC	5-13

Note: You can use either the *install.bat* script or the BCC to establish an initial IP interface. For information about using the script, see Chapter 4, "Using the Installation Script to Quick-Start a Router."

See "Using the Quick-Start Worksheet on page 3-2 to collect the network information you will need to quick-start the router with BCC commands.

Immediately after quick-starting with the BCC, secure your router. For information, see Chapter 7, "Securing the Router."

This chapter provides only the information needed to create an initial interface. You can continue the configuration with the BCC or another configuration tool, such as Site Manager.

Overview of the BCC

You access the BCC by entering **bcc** at the Technician Interface prompt. The `bcc>` prompt appears, from which you can run any BCC or Technician Interface command. You enter configuration mode by entering **config**.

The BCC views the router as a hierarchy of objects and parameters you can configure either globally for the whole router or individually for each interface. The BCC always displays a prompt that indicates your current working context (or location) within the hierarchy.

You start from the root level with the box prompt (box #) and define each interface and its protocols. To quick-start a router, you configure one Ethernet interface, add the IP protocol, and add a routing protocol if the workstation is located on a different LAN than the router (Figure 5-1). Next, you add some global services that apply uniformly to all slots of a router: SNMP, FTP, TFTP, and Telnet.

Note: If you want to enable the HTTP Server as a global service on the router after quick-starting with the BCC, use the Site Manager tool.

For more information about the BCC, see:

- *Using the Bay Command Console (AN/BN Routers)*
- *BCC Quick Reference (AN/BN Routers)*
- *Release Notes for Router Software Version 12.10*

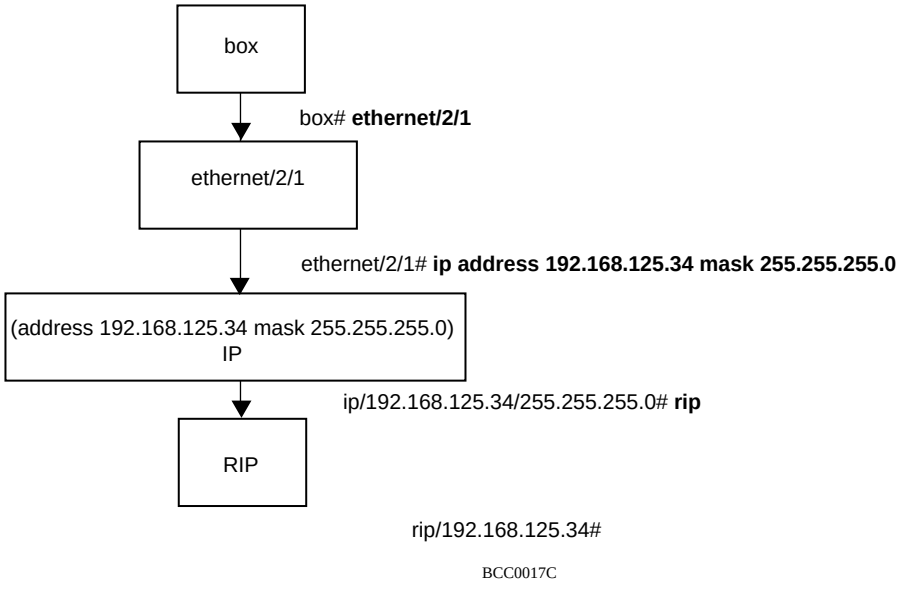

Figure 5-1. Configuring IP and RIP on an Ethernet Interface

Essential BCC Commands

Table 5-1 lists the essential BCC commands you will need to use BCC Help, change your location, view what you can configure, and review what you added.

Table 5-1. Essential BCC System and Navigation Commands

Category	BCC Command	Task
System Help	**?**	List the system commands you can enter.
	help	List BCC help features.
Configuration mode Help	**?**	List the names of all objects, parameters, and commands at this level.
	<object> **?**	Show the configuration syntax and list the parameters of an object you can configure from the current level.
	help parameters	Define parameters at the current level.
	<parameter> **?**	Display values for this parameter of the current object.
	help tree	Show the BCC configuration structure.
	info	List values assigned to parameters of this object.
	lso	Show objects configured at the next (branch) level.
Navigation	**back**	Go back one level.
	pwc	Show full context, starting from root (box#) level.
	box	Return to the top (box) level of router configuration.
Configuration mode	**config**	Enter configuration mode.
Configuration status	**show config**	Show the total device configuration in BCC syntax.
Other commands	**[Control]+p** **[Control]+n**	Recall previous or next command from the command history list.
	exit	Exit configuration mode; enter **exit** again to return to the Technician Interface prompt.

Quick-Starting Your Router with the BCC

The following procedure provides a sequence of commands you can use to quick-start your BN or AN router on an Ethernet network. Before beginning this procedure you need to:

- Learn the basic BCC commands listed in Table 5-1.
- Complete the steps in Chapter 2, "Preparing the Router for Quick-Start," including booting the router with the *ti.cfg* file.
- For ANs, review the local boot procedure and slot and connector information in *Configuring BayStack Remote Access*. By default, the AN router is configured to boot over the network. To quick-start an AN with the BCC, you must first change the default boot to local mode with the **bconfig config local** command.

To quick-start your router:

1. **Log on to the Technician Interface as Manager.**

```
Login: Manager

Mounting new volume...
Device label:
Directory: 2:
New Present Working Directory: 2:


Welcome to the Backbone Technician Interface
```

2. **Start the BCC interface by entering bcc.**

```
[2:1]$ bcc

  Welcome to Bay Command Console!

  * To enter configuration mode, type config

  * To list all system commands, type ?

  * To exit the BCC, type exit

bcc>
```

3. **Start BCC configuration mode by entering config at the bcc> prompt.**

```
bcc> config
box#
```

4. **Check the board configuration inside the router:**

```
box# show config
box type freln (BLN router with a FRE controller)
   board slot 1
      type srml (system resource module in slot 1)
      back
   board slot 2
      type qenf (Quad Synchronous link module in slot 2)
      back
   board slot 3
      type wffddi2m (Multimode FDDI link module in slot 3)
      back
   board slot 4
      type sync (Synchronous link module in slot 4)
      back
   board slot 5
       type dtok (Dual token ring link module in slot 5)
       back
   back
   console portnum 1 (Console connected to port 1)
   prompt {[%slot%:1]$ }
   auto-manager-script automgr.bat
   auto-user-script autouser.bat
   back
back
```

5. **Configure a port on the router for the initial interface by adding an interface type of Ethernet on a slot with an appropriate board and adding its first connector:**

   box# **ethernet slot** <*number*> **connector** <*number*>

   Use the slot and connector number for your router. For example, enter:

   ethernet slot 2 connector 1

6. **Add IP to this port by entering its IP address and subnet mask.**

   ```
   ethernet/2/1# ip address <ip_address> mask <mask_value>
   ```

   For example, enter:

   ```
   ip address 192.168.125.34 mask 255.255.255.0
   ip/192.168.125.34/255.255.255.0#
   ```

   The BCC automatically enables ARP on this interface and adds IP globally to this router.

   If your workstation is on the same LAN as the router, go to step 10. If your workstation is not on the same LAN as the router, add one of the following routing protocols:

   - RIP
   - OSPF
   - Static Route

7. **To add RIP as the routing protocol for this IP port, enter:**

   ```
   ip/192.168.125.34/255.255.255.0# rip
   ```

   Go to step 10.

8. **To add OSPF as the routing protocol for this IP port:**

   a. **Add an OSPF area:**

   ```
   ip/192.168.125.34/255.255.255.0# ospf area <number>
   ```

   For example, enter:

   ```
   ip/192.168.125.34/255.255.255.0# ospf area 0.0.0.0
   ospf/192.168.125.34#
   ```

   b. **View the default values assigned to this OSPF area:**

   ```
   ospf/192.168.125.34# info
      on ip/192.168.125.34/255.255.255.0
      state enabled
      area 0.0.0.0
      authentication {}
      type broadcast
      priority 1
      transit-delay 1
      retransmission-interval 5
      hello-interval 10
      dead-interval 40
      poll-interval 120
   ```

```
metric 1
mtu 1
```

The type, hello-interval, and dead-interval parameters must match those of your network. To change these default values, you first need to learn more about the BCC before proceeding. Refer to Table 5-1 on page 5-4 to learn about the Help and navigation commands. Use the parameter Help command (example: **type ?**) to view the values you can assign and any further parameters you need to configure. See *Using the Bay Command Console (AN/BN Routers)* for more information.

c. If the OSPF router ID is the same as the IP address of the first router port, go to step 10.

d. If the OSPF router ID is different from the IP address of this first router port, return to root (box) level to change the OSPF router ID as a global parameter.

```
ospf/192.168.125.34# box
box#
```

e. Move to global IP by entering:

```
box# ip
ip#
```

f. Move to global OSPF by entering:

```
box# ospf
ip/ospf#
```

g. Change the OSPF router ID by entering:

```
ip/ospf# router-id <ip_address>
```

For example, enter:

```
ip/ospf# router-id 192.168.125.10
```

Go to step 10.

9. To add a static route to this IP port:

a. Return to the root (box) level to configure the static route globally.

```
ip/192.168.125.34/255.255.255.10# box
```

b. Move to global IP by entering:

```
box# ip
```

c. **Add a static route and the next hop by entering:**

```
ip# static-route address <ip_address> mask <mask_value>
next-hop-address <ip_address>
```

For example, enter:

```
ip# static-route address 192.168.124.10
mask 255.255.255.0 next-hop-address 192.168.125.35
static-route/192.168.124.10/255.255.255.0/192.168.125.35#
```

10. **Return to root (box) level to configure global system services which affect all slots, such as SNMP, FTP, Telnet, and TFTP.**

```
<current_level># box
```

11. **Add SNMP globally to the router by entering:**

```
box# snmp
snmp#
```

12. **Specify an SNMP community name, for example, "public."**

```
snmp# community public
community/public#
```

13. **Define the access level you want for the port for router security.**

By default, access is read-only. If you want access to be read-write, enter:

```
community/public# access read-write
```

14. **Define the workstation that will be the SNMP manager for the router by entering:**

```
community/public# manager <ip_address>
```

<*ip_address* > is the address of the workstation that will be the SNMP manager. (An address of 0.0.0.0 allows any workstation to be the manager.)

For example, enter:

```
community/public# manager 192.32.20.12
manager/public/192.32.20.12#
```

15. **Return to root (box) level.**

```
manager/public/192.32.20.12# box
```

16. **Configure Telnet from the root level by entering:**

```
box# telnet
```

17. **Add the Telnet client.**

```
telnet# client
client#
```

18. **Go back one level by entering:**

```
client# back
telnet#
```

19. **Add the Telnet server.**

```
telnet# server
```

20. **Return to root (box) level.**

```
telnet# box
```

21. **Add TFTP to the router from the root level.**

```
box# tftp
```

22. **Return to root (box) level.**

```
tftp# box
```

23. **Add FTP to the router from the root level.**

```
box# ftp
```

24. **Save your initial configuration file to the router's volume as *startup.cfg*.**

```
box# save config <volume>:startup.cfg
```

For example, enter:

```
box# save config 2:startup.cfg
```

Save the configuration as a file other than *config* until you can test the configuration file.

25. **Test the initial IP interface by pinging the router's own interface.**

```
box# ping <ip_address>
```

For example, enter:

```
box# ping 192.168.125.34
```

26. **Test the initial IP interface by pinging the workstation where you use the BCC or other configuration tool.**

```
box# ping <ip_address>
```

For example, enter:

```
box# ping 192.32.20.12
```

If either ping is unsuccessful, see "Quick-Start Troubleshooting with the BCC" on page 5-13.

27. **Review your initial router configuration by entering:**

```
box# show config
```

This command shows the total device configuration in terms of BCC syntax (commands and data), and returns you to the current context.

For example, enter:

```
box# show config
box type freln
board slot 1
      type srml
  back
  board slot 2
      type qenf
  back
  board slot 3
      type wffddi2m
  back
  board slot 4
      type sync
  back
  board slot 5
      type dtok
  back
  ethernet slot 2 connector 1
      circuit-name E21
    ip address 192.168.125.34 mask 255.255.255.0
      arp
      back
      rip
      back

    back
  back
  ip
    tcp
    back
    arp
    back
    rip
    back
  back
  ftp
```

```
      default-volume 2
  back
  snmp
    community label public
        access read-write
      manager address 192.32.20.12
      back
    back
  back
  tftp
      default-volume 2
  back
  console portnum 1
      prompt {[%slot%:1]$ }
      auto-manager-script automgr.bat
      auto-user-script autouser.bat
  back
  telnet
    client
    back
    server
    back
  back
back
box#
```

28. **Exit BCC configuration mode by entering the exit command at any prompt.**

    ```
    box# exit
    bcc>
    ```

29. **When you finish using the BCC, enter the exit command at the** `bcc>` **prompt.**

    ```
    bcc> exit
    [2:1]$
    ```

Exiting the BCC returns you to the Technician Interface prompt.

You now have a configuration file named *startup.cfg* on the router volume that contains your initial interface. The configuration is active in the router's memory.

Caution: Do not reboot the router after successfully completing the Quick-Start procedure. By default, the router reboots with the file named *config*, not the *startup.cfg* file you just created. See Chapter 6, "Completing the Router Configuration," for instructions on testing the *startup.cfg* file before you save it as *config*.

Bay Networks recommends that you immediately secure your router to prevent unauthorized access. See Chapter 7, "Securing the Router," for information.

Quick-Start Troubleshooting with the BCC

If the router cannot ping the workstation during the Quick-Start procedure, check the following:

- The network could be slow or disabled, or the ping test timed out. Continue checking the other items.
- Check the physical connections.
- If the workstation is a PC, a supported TCP/IP stack must be running for a successful ping. (See Chapter 8, "Installing Site Manager on a PC," for information about TCP/IP stacks, adapters and drivers.
- Verify the IP address of the router. Enter the **show ip circuits** command at the Technician Interface prompt to make sure that the physical interface is up and that the IP address is correct. For more information about the **show** command, see *Using Technician Interface Scripts*.
- Verify the IP address and subnet mask address of the configuration workstation.
- If the workstation is on a different network, verify that routing is active. Enter the **show ip routes** command at the Technician Interface prompt to examine the routing table and verify that there is a route or a default route to the network where the workstation is located. For more information about the **show** command, see *Using Technician Interface Scripts*.

Note: If the installation failed and you must rerun the script, first reboot the router with the *ti.cfg* file.

Chapter 6
Completing the Router Configuration

This chapter provides an overview of the tools and procedures you can use to complete the router's configuration. Refer to the following topics:

Topic	Page
Selecting a Configuration Tool	6-1
Completing the Configuration Procedure	6-2
Communicating with the Router Remotely	6-3

Selecting a Configuration Tool

Bay Networks provides the following tools for configuring your router. See the Release Notes for information about the platforms, interfaces, and protocols that each tool supports.

- The BCC

  The BCC is a command-line interface for configuration. You can enhance your Quick-Start configuration with the BCC for the supported interfaces and protocols. Configuration files created with the BCC can be modified with other tools, but first make sure that you save the BCC configuration as a binary file.

  For more information, see *Using the Bay Command Console (AN/BN Routers).*

- Site Manager

  Site Manager is a graphical user interface for configuration. If you need to install Site Manager, see the installation chapter for your workstation later in this book (Chapters 8 through 12).

For information about using Site Manager, see *Configuring and Managing Routers with Site Manager.*

- NETarchitect

  NETarchitect integrates Site Manager's Configuration Manager tool with File Manager to help you store, distribute, and boot multiple router files.

  For more information, see *Configuring and Maintaining Networks with the NETarchitect System* in the Optivity® documentation set.

- Quick2Config

  Quick2Config is an easy-to-use configuration tool for the ASN and the BayStack AN and ANH routers.

  For more information, see *Configuring Your Router Using the Quick2Config Tool* in the Quick2Config documentation set.

- Technician Interface

  The Technician Interface is a command-line interface for managing routers and setting MIB values. (BCC commands are gradually replacing Technician Interface functions.)

  For more information, see *Using Technician Interface Software*.

- HTTP Server

  The HTTP Server provides embedded Web tools on the router to view device information. It also provides some configuration functions like port disabling. You enable the HTTP Server on the router from *install.bat* or Site Manager.

  For more information, see *Managing Your Network Using the HTTP Server.*

Completing the Configuration Procedure

The Quick-Start procedure creates a configuration file named *startup.cfg* on the router. The initial configuration is active in the router's memory.

You use a configuration tool to add protocols and ports to the initial configuration. After testing the new configuration, you save it as *config*, the router's default configuration file.

Note: Be sure to create and test a new *config* file as soon as you complete the Quick-Start procedure. By default the router boots with *config* unless you specify another file. It is important that you always keep a working, tested file named *config* to ensure that the router operates correctly.

The following outlines the general procedure for modifying the initial configuration with your chosen tool:

1. **Make a backup copy of the *startup.cfg* file using the configuration tool.**
2. **Modify the *startup.cfg* file by adding interfaces and protocols.**
3. **Save the modified configuration as a test file, for example, *test.cfg*.**
4. **Boot the router with the test configuration file.**
5. **Verify that the router's new configuration works correctly.**
6. **Save the verified configuration file as *config*.**

   Always save a copy of the current *config* file before you overwrite it.

Communicating with the Router Remotely

In addition to the network connections you make to the router with tools such as Site Manager, you can also communicate with the router remotely using:

- Telnet connections
- Out-of-band connections
- Memory card distribution

Telnet Connections

You can manage a router from a remote workstation by establishing a Telnet connection and using the router's Technician Interface and the BCC. See *Using Technician Interface Software* for information about establishing a Telnet session.

Out-Of-Band Connections

As a backup method of reaching the Technician Interface and the BCC, you can also access the router remotely through the modem port. This connection is called a remote out-of-band connection. *Out-of-band* refers to the fact that it is not dependent on a network connection, so that you can still communicate with your router even if the network is down.

See *Using Technician Interface Software* for information about modem connections and your installation guide for information abut connecting modems.

Router Memory Card Distribution

You can also distribute files to the router on memory cards. Some network managers modify router files at a central location, save them to a memory card, and then distribute the card to a remote office. Be sure to read the safety warnings in the router's installation guide before changing memory cards.

Chapter 7
Securing the Router

Bay Networks recommends that you immediately secure your router to prevent unauthorized access. This chapter provides an overview of the security features and services of you can use:

Topic	Page
Assigning a Password to the Technician Interface	7-2
Securing New Routers with the BCC or the Installation Script	7-3
Setting Global IP Access Policies with the BCC	7-3
Restricting Read/Write Access with SNMP Communities	7-3
Setting Secure Mode	7-4
Authentication Failure Traps	7-6
Assigning SecurID to Telnet Connections	7-6
Turning Off FTP and Telnet on the Router	7-6
Using the Image Builder to Remove Services	7-6
Restricting Access to the HTTP Server	7-7
Configuring Data Encryption Services	7-7
Configuring RADIUS	7-8
Installing BaySecure FireWall-1	7-8

Assigning a Password to the Technician Interface

The Technician Interface provides local and remote access to your router's file system. You should immediately add a security password for the administrator of the router's Technician Interface.

1. **Enter the password command for a manager:**

   password Manager

   The console displays the following message:

   ```
   Changing password for Manager
   Old password:
   ```

2. **Because there is no old password, press the Return key.**

   ```
   New Password:
   ```

3. **Enter the new password.**

   The password can have from 0 to 16 alphanumeric characters.

4. **Reenter your password at the prompt.**

   ```
   Retype new password:
   ```

   The console displays the following message:

   ```
   Manager password changed
   ```

See *Using Technician Interface Software* for instructions on setting passwords for users and additional information.

Securing New Routers with the BCC or the Installation Script

Although you can quick-start BN and AN routers using either the BCC or the *install.bat* script, the BCC provides an operational advantage if you have security concerns.

By default, the BCC adds read-only access to the router. You must explicitly configure write access. After you quick-start the router, you can immediately use the BCC to change the global IP access policies and secure the router.

The *install.bat* script adds read-write access by default. You must then establish a Site Manager (or other configuration tool) session before you can add additional security for IP services.

See “Setting Global IP Access Policies with the BCC” and “Restricting Read/Write Access with SNMP Communities” for additional information.

Setting Global IP Access Policies with the BCC

The BCC allows you to create global IP access policies for BN and AN routers that control access to specific IP services, including Telnet, FTP, TFTP, and SNMP.

You define a policy and its actions by setting BCC parameters. See the appendix “Configuring Global IP Policies” in *Configuring IP Utilities* for more information.

Restricting Read/Write Access with SNMP Communities

You can use either Site Manager or the BCC to control SNMP access to the router. You should restrict read/write access to the router as soon as possible by reconfiguring the SNMP communities.

When you add SNMP with the BCC, access is defined by default as read-only. You should immediately add managers to control any write access you explicitly add.

By default, the Quick-Start installation script (*install.bat*) creates a read/write SNMP community named "public" with a wildcard manager (0.0.0.0) that allows universal read/write access. Bay Networks *strongly* recommends that you use Site Manager or BCC commands to:

1. **Reconfigure the "public" community as read-only for universal access.**
2. **Create a read/write community with a unique name (for example, EASTBAY) and a manager list containing the IP addresses of the workstations that need read/write access to the router.**

See *Configuring SNMP, BootP, DHCP, and RARP Services* for more information about configuring SNMP. See *Using the Bay Command Console (AN/BN Routers)* for information about BCC commands.

Setting Secure Mode

Bay Networks routers have an optional security mechanism, called *secure mode*, that uses an encryption algorithm to prevent unauthorized SNMP SET requests to the MIB variables of the router.

In secure mode, when Site Manager issues the first SET request within an application, you must enter a key to allow Site Manager to operate in secure mode. A Site Manager SET request to the router includes the encrypted value of a counter. When the agent on the router receives the SET request, it compares the encrypted value with the value of its own counter plus 1. If the two counters match, the agent considers the SET request authentic, increments the counter by 2, stores it in encrypted form in the MIB, and sends it back to Site Manager.

Secure mode protects against these security violations:

- *Message stream modification*, in which an intruder reorders, delays, or replays SET requests to specify unauthorized management settings
- *Masquerade operations*, in which an intruder assumes the IP address of an authorized user to specify unauthorized management settings

Secure mode does not protect against the following security violations, which are beyond the scope of this proprietary interim security system:

- *Modification of information*, in which an intruder intercepts a packet, modifies its contents, and reinserts it into the message stream before the agent's counter increments
- *Disclosure*, in which an intruder observes which variables are being set

Enabling the security mechanism only minimally affects router performance. The security mechanism has no effect on the ability of Site Manager, or of any SNMP network manager, to monitor the router by performing GET, GET-NEXT, or trap functions.

Specifying Secure Mode

To set the router to secure mode:

1. **Set up private, read-write SNMP communities for your router using Site Manager.**

   You cannot use public communities with secure mode. See "Restricting Read/Write Access with SNMP Communities" on page 7-3 for instructions on changing SNMP communities.

2. **Using the Technician Interface on the router, enter the following command:**

   wfsnmpmode 3

   3 indicates that the router should operate using the proprietary security mechanism.

3. **Specify a password key for the encryption algorithm to use when it encrypts the security counters by entering the following command:**

   wfsnmpkey *<key>*

   <key> is the string of ASCII characters that you select to make up the encryption code for this router. The key can have up to six characters. The encryption algorithm uses the attributes of the key (size, range, and value) in the encryption process.

To turn off secure mode and revert to the default SNMP community security mode (called trivial mode), enter the following Technician Interface command:

wfsnmpmode 1

Authentication Failure Traps

The router generates an authentication failure trap when it receives an SNMP message from an SNMP manager falsely claiming to be in a particular community or specifying an unknown community.

To enable the authentication failure trap feature on the router, configure an SNMP community manager to receive the trap. (See *Configuring SNMP, BootP, DHCP, and RARP Services.*)

Assigning SecurID to Telnet Connections

You can enable password protection for your Telnet connections to the router using SecurID services. See *Using Technician Interface Software* for information about enabling SecurID services.

Turning Off FTP and Telnet on the Router

If you have local access to your router or do not need network access to maintain your router, consider turning off FTP and Telnet. Your router will be more secure without network access and will require less memory and processing overhead.

You can turn these services off using the BCC or Site Manager. See *Configuring IP Utilities* for instructions.

Using the Image Builder to Remove Services

The Image Builder tool provided with Site Manager allows you to modify the router software image. You can use the Image Builder tool to remove unwanted services and protocols, such as FTP, from the router. See *Configuring and Managing Routers with Site Manager* for more information.

Restricting Access to the HTTP Server

The HTTP Server uses the following Technician Interface logins and passwords to restrict access:

- The Manager login allows access to all services. To sign on as Manager on the HTTP Server, you must first add a password for Manager using the Technician Interface (see "Assigning a Password to the Technician Interface" on page 7-2).
- The User login prohibits access to the SNMP community page and prevents changes to the ports and protocols on the router. A password is not required.

Configuring Data Encryption Services

Bay Networks data encryption services enable you to protect sensitive traffic on your network. Encryption prevents unauthorized persons from reading, changing, or replaying data that travels between Bay Networks routers.

Data encryption services include:

- Software-based encryption for PPP dedicated links for the BN, AN, ARN, and ASN routers; System 5000 router modules; and all serial interfaces. This includes encryption on multiline and multilink.
- Software-based encryption for frame relay circuits that have one permanent virtual circuit (PVC) per service record. This include encryption on multiline.
- Encryption configurable on a line or circuit basis.
- Encryption with or without data compression.

You can configure PPP dial backup for a frame relay circuit that uses data encryption. Be aware, however, that if the primary circuit fails, data that travels over the backup circuit is unencrypted.

See *Configuring Data Encryption Services* for more information.

Configuring RADIUS

Remote Authentication Dial-In User Service (RADIUS) defines a method of centralizing authentication and accounting information for networks with many remote dial-in users. By placing authentication and accounting functions in one central location, you can improve security and better manage large networks.

In a network using RADIUS, the router is the RADIUS client. The client is the connection point between remote users and a RADIUS server. The server has the information that it needs to identify remote users and to keep accounting information for each call.

For more information, See *Configuring RADIUS*.

Installing BaySecure FireWall-1

For additional network security, Bay Networks provides BaySecure™ FireWall-1 software. This software integrates the Check Point FireWall-1 network security engine from Check Point Software Technologies Ltd into the Bay Networks router software to create a security system that provides fully secure, antispoofing communication for all Internet applications and services. For more information, see *Configuring BaySecure FireWall-1*.

To purchase or learn more about BaySecure FireWall-1 software, call Bay Networks Sales at 1-800-8-BAYNET.

Chapter 8
Installing Site Manager on a PC

Site Manager is a graphical user interface for router configuration and management over an IP network. To install Site Manager on a PC running Windows 95, review the following topics:

Topic	Page
System Requirements	8-1
Updating TCP/IP, Network Adapters, and Drivers	8-2
Loading and Starting Site Manager Software	8-4

System Requirements

To run Site Manager, your PC must meet the following hardware and software requirements:

- 486 PC (Pentium PC recommended)
- Microsoft Windows 95
- 16 MB of RAM (minimum)
- 60 MB of free disk space
- Microsoft TCP/IP for Windows 95 and compatible network adapters and driver
- CD-ROM drive
- VGA monitor (SuperVGA monitor recommended)

Updating TCP/IP, Network Adapters, and Drivers

Site Manager Version 6.10 for Windows 95 requires the Microsoft TCP/IP protocol stack provided with Windows 95 and a compatible network adapter and driver.

If you purchased a PC with Windows 95 and a network adapter installed, most likely you have the correct TCP/IP protocol stack, network adapter, and driver. Go to "Testing TCP/IP" on page 8-3.

If you need to upgrade from Windows 3.1 to Windows 95, first uninstall any existing 16-bit TCP/IP stack, such as Distinct TCP/IP Run Time. Otherwise, Windows 95 will install that stack instead of the Microsoft TCP/IP protocol stack.

If you already upgraded from Windows 3.1 to Windows 95 and the upgrade kept an existing 16-bit TCP/IP stack, such as Distinct TCP/IP Run Time, you must uninstall the 16-bit TCP/IP stack before adding the Microsoft TCP/IP protocol stack.

To uninstall a 16-bit TCP/IP stack, refer to the TCP/IP provider's documentation and support for help in removing the stack's path statements, services file, and WINSOCK.DLL files dated prior to July 11, 1995 (the date of the WINSOCK.DLL file installed by Windows 95).

To add or update a protocol, network adapter, or driver, refer to the appropriate documentation and support from Microsoft and the adapter manufacturer. Protocol and driver updates are added from the Network option of the Control Panel. New network adapters and their drivers are added from the Add New Hardware option of the Control Panel.

Windows 95 attempts to match a driver to the network adapter installed on your PC. If Windows 95 cannot match a compatible driver, you need to update the driver. Contact the adapter manufacturer for the latest drivers. Microsoft and other Windows 95 Web sites may also have updated drivers.

Refer to *Microsoft Windows 95 Resource Kit* for additional technical information about these issues. A hard copy is available from Microsoft Press.

Preparing the Network Control Panel

In addition to obtaining the supported TCP/IP protocol, network adapters, and drivers, you need to configure the Network option of the Control Panel with the required information for your network.

Choose Control Panels > Network > TCP/IP > Properties to display the TCP/IP properties menu, which contains tab windows for the following information:

- IP address
- WINS configuration
- Gateway
- Bindings
- Advanced
- DNS configuration

Refer to your Windows 95 Help or documentation for information about setting the parameters in these windows.

Testing TCP/IP

Before installing Site Manager, send a ping request to the router to make sure your computer's TCP/IP function is running.

1. **From the Start Menu, choose Programs > MS-DOS Prompt.**
2. **Enter the following command to ping your router:**

   ping *<ip_address>*

   <ip_address> is the IP address of your router.

   Messages appear at the prompt indicating whether replies were received. Replies verify that your Microsoft TCP/IP protocol stack is functional.

Loading and Starting Site Manager Software

Caution: If you are reinstalling Site Manager, be aware that the installation will overwrite the *c:\windows\siteman.ini* file. If you are installing multiple versions of Site Manager on the same PC, make a copy of this file and later edit the new file to include the information about the other versions.

To install Site Manager software from a CD:

1. **Insert the Bay Networks Site Manager CD into your CD-ROM drive.**
2. **Access the Run window by choosing Run from the Start menu.**
3. **Type the CD-ROM drive, path, and executable file:**

   ***<CD-ROM drive>*:\ms_win\setup.exe**

   The D: drive is usually the CD-ROM drive.
4. **Click on OK.**

   You can also use the Browse button, Windows Explorer, or My Computer to select the CD-ROM drive and the path to the *ms_win* directory and then click on *setup.exe*.

   The installation script prompts you for the directory in which you want to install Site Manager.
5. **Enter the directory in which to install Site Manager, or accept the default, *c:\WF*.**

   The Site Manager files are installed in the chosen directory. When the installation is finished, the following prompt appears:

   ```
   Create windows program group/items automatically?
   ```
6. **To add Site Manager as a selection on the Start > Programs menu, click on Yes.**

   This option allows you to start Site Manager after installation by choosing Start > Programs > Site Manager > PC_Site Manager.

   If you do not want Site Manager to appear as a selection on the Start > Programs menu, click on No.

   The following prompt appears:

   ```
   Do you want to start Site Manager now?
   ```

7. **Click on Yes at the prompt to start Site Manager.**

   The Router Connection Options window opens.

8. **Enter the IP address and SNMP community of the initial router interface that you created during the Quick-Start procedure.**

9. **Click on OK to display the main Site Manager window (Figure 8-1).**

After you successfully install and start Site Manager, see *Configuring and Managing Routers with Site Manager* for more information.

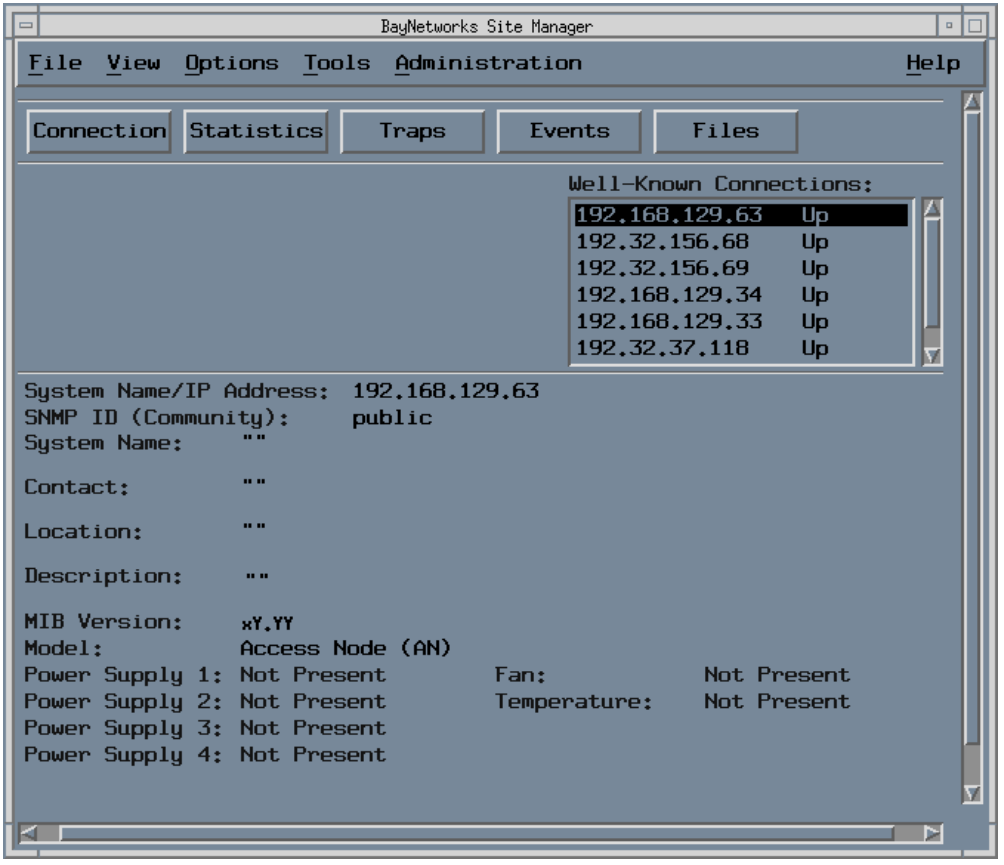

Figure 8-1. Site Manager Window

Chapter 9
Installing Site Manager on a Workstation Running Windows NT

Site Manager is a graphical user interface for router configuration and management over an IP network. To install Site Manager on a workstation running Windows NT, review the following topics:

Topic	Page
System Requirements	9-1
Preparing the Network Control Panel	9-2
Testing TCP/IP	9-2
Loading and Starting Site Manager Software	9-3

System Requirements

Site Manager for the Windows NT operating system runs in 16-bit mode. Your workstation must meet the following hardware and software requirements:

- 486/100 workstation (Pentium workstation recommended)
- Microsoft Windows NT Version 4.0
- 16 MB of RAM (minimum)
- 60 MB of free disk space
- TCP/IP Protocol and compatible network adapters and driver
- CD-ROM drive
- VGA monitor (SuperVGA monitor recommended)

Preparing the Network Control Panel

You need to configure the Network option of the Control Panel with the required information for your network. Refer to Windows NT Help and documentation or commercial publications such as *Microsoft Windows NT Resource Kit* if you need technical information about setting the Network options.

For the TCP/IP Protocol option, you need to set the following information:

- IP address
- DNS
- WINS address
- Routing

Testing TCP/IP

Before installing Site Manager, send a ping request to the router to make sure your computer's TCP/IP function is running.

1. **From the Start Menu, choose Programs > MS-DOS Prompt.**
2. **Enter the following command to ping your router:**

   ping *<ip_address>*

   <ip_address> is the IP address of your router.

   Messages appear at the prompt indicating whether replies were received. Replies verify that your Microsoft TCP/IP protocol stack is functional.

Loading and Starting Site Manager Software

Caution: If you are reinstalling Site Manager, be aware that the installation will overwrite the *c:\windows\siteman.ini* file. If you are installing multiple versions of Site Manager on the same workstation, make a copy of this file and later edit the new file to include the information about the other versions.

To install Site Manager software from a CD:

1. **Insert the Bay Networks Site Manager CD into your CD-ROM drive.**
2. **Access the Run window by choosing Run from the Start menu.**
3. **Type the CD-ROM drive, path, and executable file:**

   ***<CD-ROM drive>*:\ms_win\setup.exe**

   The D: drive is usually the CD-ROM drive.
4. **Click on OK.**

   You can also use the Browse button, Windows Explorer, or My Computer to select the CD-ROM drive and the path to the *ms_win* directory and then click on *setup.exe*.

   If the TCP/IP services file is not located in the default directory, (*C:\WINNT\system32\drivers\etc*), the installation script prompts you for the directory.
5. **If prompted to do so, enter the path to the directory where the TCP/IP services file is located.**

Note: The *TCP/IP services* file is different from the *services.exe* file.

The installation script prompts you for the directory in which you want to install Site Manager.

6. **Enter the directory in which to install Site Manager, or accept the default, *c:\WF*.**

   The Site Manager files are installed in the chosen directory. When the installation is finished, the following prompt appears:

   ```
   Create windows program group/items automatically?
   ```

7. **To add Site Manager as a selection on the Start > Programs menu, click on Yes.**

   This option allows you to start Site Manager after installation by choosing Start > Programs > Site Manager > PC_Site Manager.

   If you do not want Site Manager to appear as a selection on the Start > Programs menu, click on No.

   The following prompt appears:

   ```
   Do you want to start Site Manager now?
   ```

8. **Click on Yes at the prompt to start Site Manager.**

   The Router Connection Options window opens.

9. **Enter the IP address and SNMP community of the initial router interface that you created during the Quick-Start procedure.**

10. **Click on OK to display the main Site Manager window (Figure 9-1).**

After you successfully install and start Site Manager, see *Configuring and Managing Routers with Site Manager* for more information.

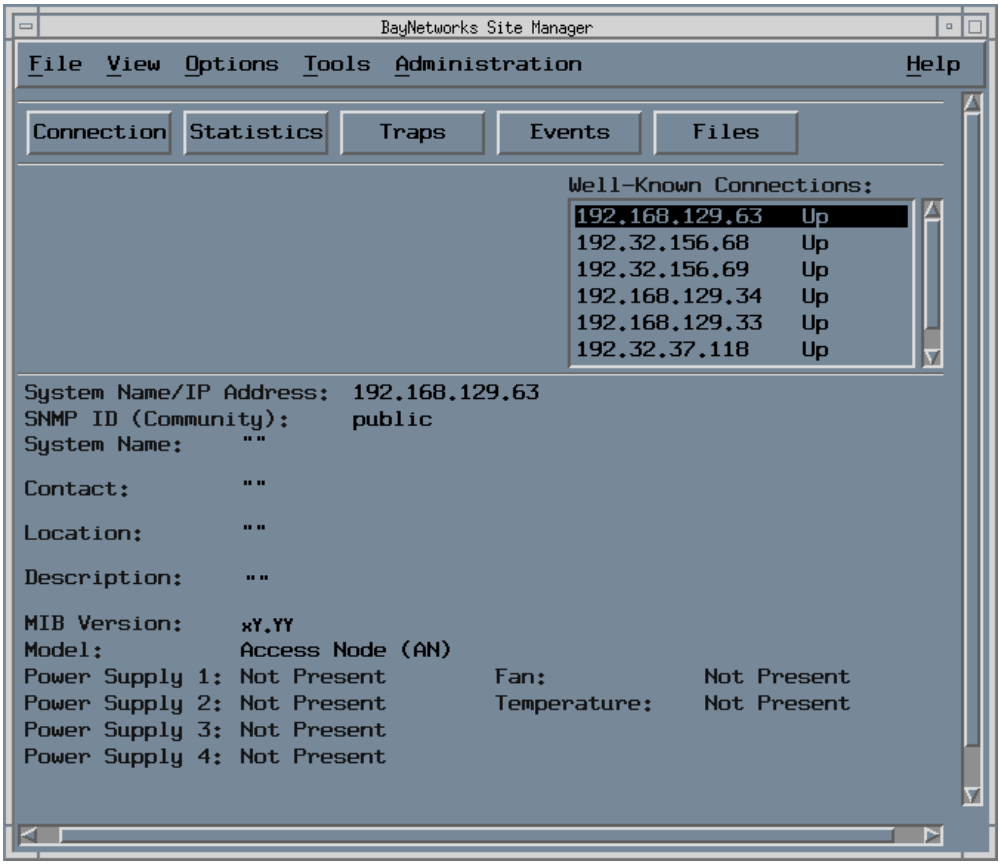

Figure 9-1. Site Manager Window

Chapter 10
Installing Site Manager on a SPARCstation

Site Manager is a graphical user interface for router configuration and management over an IP network. To install Site Manager on a SPARCstation, review the following topics:

Topic	Page
System Requirements	10-2
Setting Up the SPARCstation	10-2
Loading Site Manager Software	10-3
Setting Up Site Manager User Accounts	10-5
Verifying Site Manager Installation	10-6
Starting Site Manager	10-6

System Requirements

To run Site Manager, your SPARCstation must meet the following hardware and software requirements:

- Supported workstations
  - -- SPARCstation 10, 20
  - -- UltraSPARCstation
- Supported operating systems
  - -- SunOS 4.1.4
  - -- Solaris 2.5.1 and 2.6
- Window environment for Solaris
  - -- CDE 1.0.1
  - -- OpenWindows 3.5
- 32 MB of RAM (64 MB recommended)
- 85 MB of disk space
- 32 MB of swap space
- Network adapter appropriate for your network
- CD-ROM drive

Setting Up the SPARCstation

Before you load Site Manager software on your SPARCstation, do the following:

1. **Log in to the SPARCstation as root (or enter su root).**
2. **Edit the *letc/services* system file (on each host device) to include the following lines at the bottom of the file:**

   snmp161/udp
   snmp-trap162/udp

   You can use any text editor to edit the file. The first line associates the service name **snmp** with UDP port number 161 on this host device. The second line associates the service name **snmp-trap** with UDP port number 162.
3. **Save *letc/services* and exit from the text editor.**

Loading Site Manager Software

Load Site Manager software on the SPARCstation as follows:

- Mount a CD-ROM drive.
- Install the software.
- Unmount the drive.

Note: The command for mounting the CD-ROM drive varies depending on your system, for example, the number of CD-ROM drives. If the suggested mount command fails, consult your operating system documentation.

Mounting a CD-ROM Drive on SunOS and Solaris

To mount a CD-ROM drive:

1. **Insert the appropriate CD and drive tray into the CD-ROM drive.**
2. **Log in as root by entering:**

   su
3. **At the password prompt, enter your root password.**
4. **If a subdirectory or file system does not already exist for the CD, create one by entering:**

   mkdir /cdrom
5. **Mount the CD-ROM drive.**
   - For SunOS, enter:

     mount -r -t hsfs /dev/*sr0* **/cdrom**

     sr0 is the CD-ROM drive's address.
   - For Solaris, the Volume Manager automatically mounts the CD onto */cdrom/release_1210_610*. If the CD does not automatically mount, stop the *vold* daemon and manually mount the drive.
     a. **Display the daemon's process ID by entering:**

        ps -ef | grep vold
     b. **If there is a process running for the *vold* daemon, enter:**

        kill *<process_id>*

c. **Mount the CD-ROM drive by entering:**

mount -F hsfs -o ro /dev/dsk/*c0t6d0s0* /cdrom

c0t6d0s0 is the CD-ROM drive's address.

Installing the Software

To install Site Manager software:

1. **As root, change to the CD-ROM mountpoint.**

   cd /cdrom

   If you use Solaris and are running the *vold* daemon, enter:

   cd /cdrom/release_1210_610

2. **Run the script to load Site Manager software by entering:**

   . /INSTALL.SH

   Type the command in all uppercase letters. The installation process does the following:

   - Lists the directories that contain enough space to install Site Manager. You can then specify the directory you want to use.
   - Executes the Site Manager installation script, *WFSM_INSTALL*.

   When the installation is finished, your workstation displays the message:

   ```
   Site Manager Installation Complete.
   ```

   Additional messages about your SPARCstation environment may appear.

Unmounting the CD-ROM Drive

To unmount a CD-ROM drive, enter:

```
cd /
umount /cdrom
```

For CDs automatically mounted on a CD-ROM drive, enter:

```
cd /
eject cdrom
```

Setting Up Site Manager User Accounts

To set up individual Site Manager users on the SPARCstation:

1. **Press Control-d to exit the root account.**
2. **Log in to the user account.**
3. **If this is the first time you installed Site Manager, create the directory in which to install the Site Manager Image Builder application by entering:**

   mkdir $HOME/.builder_dir

4. **Edit the user account setup file as follows:**

   - If you use the C shell *(csh)* or clones, add the following lines to *.cshrc*:

     set path = ($path /usr/wf/bin)
     setenv WF_SMPATH /usr/wf
     setenv SMTERM X
     setenv SM_CONFIGS *<directory where config files are stored >*
     setenv BUILDER_DIR $HOME/.builder_dir

Note: If the shell variable path is already set in some other line of the *.cshrc* file, add these new lines immediately after the last `set path` line.

   - If you use the Bourne shell (*sh*) or clones, add the following lines to *.profile*:

     PATH=$PATH:/usr/wf/bin
     WF_SMPATH=/usr/wf
     SMTERM=X
     SM_CONFIGS=*<directory where config files are stored >*
     BUILDER_DIR=$HOME/builder_dir
     export WF_SMPATH SMTERM SM_CONFIGS BUILDER_DIR

5. **Log out of the user account.**

   Repeat steps 1 through 5 for each user account that needs to run Site Manager.

Verifying Site Manager Installation

To verify the Site Manager installation and environment:

1. **Log in to a user account that you set up for Site Manager.**
2. **Start the window environment (CDE or OpenWindows).**
3. **Verify the Site Manager installation by entering:**

   wfchkinst

   If the installation was successful, the workstation displays the message:

   ```
   Installation is complete and correct!
   ```

4. **Verify the Site Manager environment by entering:**

   wfchkenv

   If the environment is correctly configured, the workstation displays the message:

   ```
   Your environment seems to have been set up correctly.
   ```

Repeat steps 1 through 4 for each user account that has Site Manager installed.

Note: If your environment variables are incorrect, you receive an error message to reset the variables.

Starting Site Manager

To start the Site Manager application:

1. **Log in with a user account that has been set up for Site Manager operation.**
2. **Start the window environment, for example, CDE.**
3. **Change to a directory with read/write privileges where Site Manager can save configuration and other files.**

   For example, the following command changes to the directory */home/siteman/config_files*:

   cd /home/siteman/config_files

4. **Activate Site Manager by entering the following command:**

   wfsm -a *<router_IP_address >* **&**

   <router_IP_address> is the IP address of the router's initial interface.

   For example, the following command starts Site Manager and connects to a router with the IP address 192.168.125.34:

   wfsm -a 192.168.125.34 &

   The Site Manager window opens (Figure 10-1).

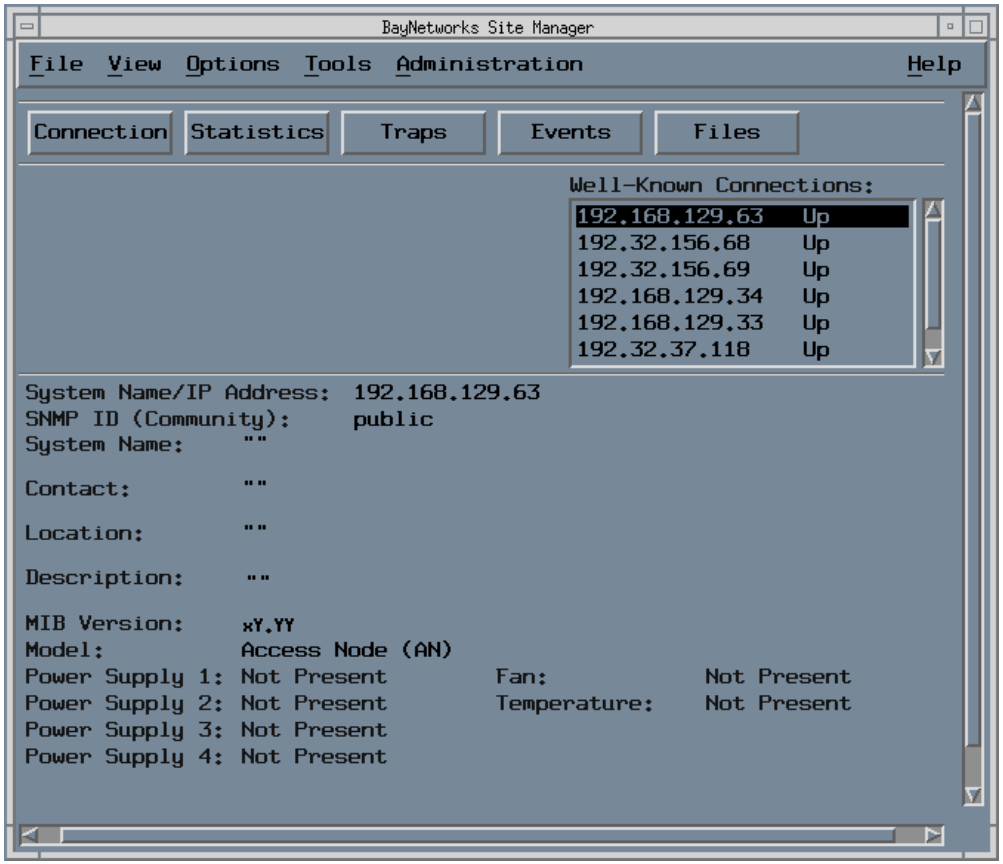

Figure 10-1. Site Manager Window

After you successfully install and start Site Manager, see *Configuring and Managing Routers with Site Manager* for more information.

Starting Site Manager from SunNet Manager

After you install Site Manager on a workstation running SunNet Manager or Domain Manager, you must exit SunNet Manager or Domain Manager and run the **snm -i** command from the command line to integrate Site Manager and update the schema in SunNet Manager or Domain Manager.

To start a Site Manager session on a workstation running SunNet Manager or Domain Manager:

1. **Open a view containing the icon of a router that you want to configure using Site Manager.**
2. **Click on the icon of the router you want to configure.**
3. **From the Tools menu, choose Site Manager (Figure 10-2).**

   The Site Manager window opens.

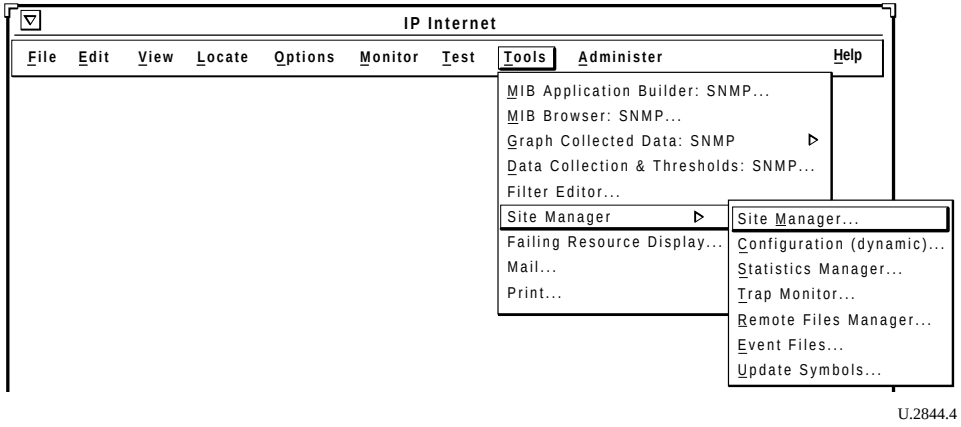

Figure 10-2. Starting a Site Manager Session from SunNet Manager

Starting Site Manager from OpenView

Read this section if you plan to install or are currently running the HP OpenView application on your SPARCstation.

After you install Site Manager on a workstation running HP OpenView, exit HP OpenView and enter **ovw -fields** at the command line to integrate Site Manager with the OpenView application and to update the symbols. Do this instead of using the Update Symbols option on the OpenView Site Manager menu.

To start a Site Manager session from the IP Internet window menu bar in OpenView:

1. **Open a view containing the icon of the router that you want to configure using Site Manager.**

   The IP Internet window opens with a map of your internetwork.

2. **Click on the icon of the router you want to configure.**

3. **From the Tools menu, choose Site Manager (Figure 10-3).**

   The Site Manager window opens with a list of tools.

4. **If the Site Manager tools are dimmed, delete the router from OpenView so that it can be rediscovered.**

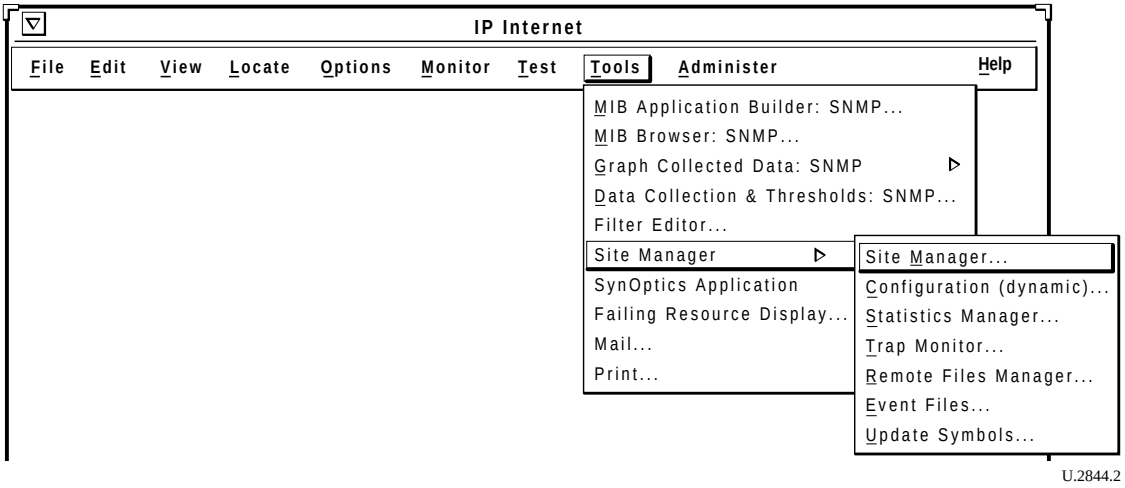

Figure 10-3. Starting a Site Manager Session from OpenView

If you install OpenView *after* you install Site Manager software, follow these steps to integrate Site Manager with the OpenView application.

1. **Change to the */usr/wf* directory.**
2. **Reexecute the Site Manager installation script by entering:**

   . / WFSM_INSTALL

Follow these steps any time you reinstall OpenView.

Chapter 11
Installing Site Manager on an IBM Workstation

Site Manager is a graphical user interface for router configuration and management over an IP network. To install Site Manager on an IBM RS/6000 or PowerPC workstation, review the following topics:

Topic	Page
System Requirements	11-2
Loading Site Manager Software	11-2
Setting Up Site Manager User Accounts	11-4
Verifying Site Manager Installation	11-5
Starting Site Manager	11-6

System Requirements

To run Site Manager, your IBM workstation must meet the following hardware and software requirements:

- Supported workstations
  - -- RS/6000 340, 370
  - -- PowerPC
- Supported operating system
  - -- IBM AIX Version 4.2
- Window environment
  - -- CDE 1.0.1
  - -- AIX Motif 1.2
- 32 MB of RAM (64 MB recommended)
- 80 MB of disk space
- 32 MB of swap space (64 MB recommended -- use 96 MB of swap space with the NetView for AIX application)
- Network adapter appropriate for your network
- CD-ROM drive

Loading Site Manager Software

Load the Site Manager software on the IBM workstation as follows:

- Mount a CD-ROM drive.
- Install the software.
- Unmount the drive.

Note: The command for mounting the CD-ROM drive varies depending on your system, for example, the number of CD-ROM drives. If the suggested mount command fails, consult your operating system documentation.

Mounting a CD-ROM Drive

To mount a CD-ROM drive:

1. **Insert the appropriate CD and drive tray into the CD-ROM drive.**
2. **Log in as root by entering:**

   su
3. **At the password prompt, enter your root password.**
4. **If a subdirectory or file system does not already exist for the CD, create one by entering:**

   crfs -v cdrfs -p ro -d'cd0' -m /cdrom -A'no' -t'no'
5. **Mount the CD-ROM drive by entering:**

   mount -v'cdrfs' -r'' /dev/*cd0* **/cdrom**

   cd0 is the CD-ROM drive's address.

Installing the Software

To install Site Manager software:

1. **As root, change to the CD-ROM mountpoint by entering:**

   cd /cdrom
2. **Run the script to load Site Manager software by entering:**

   ./install.sh

   Type the command in all lowercase letters. The installation process does the following:

   - Lists the directories that contain enough space to install Site Manager. You can accept the default or specify the directory you want to use.
   - Executes the Site Manager installation script, *WFSM_INSTALL*.

   When the installation is finished, your workstation displays the message:

   ```
   Site Manager Installation Complete.
   ```

Unmounting the CD-ROM Drive

To unmount a CD-ROM drive, enter:

```
cd /
umount /cdrom
```

Setting Up Site Manager User Accounts

To set up individual Site Manager users on the IBM workstation:

1. **Press Control-d to exit the root account.**
2. **Log in to the user account.**
3. **Create the directory for the Site Manager Image Builder application by entering:**

   ```
   mkdir   $HOME/.builder_dir
   ```

4. **Edit the user account setup file as follows:**

   - If you use the C shell *(csh)* or clones, add the following lines to *.cshrc*:

     ```
     set path = ($path   /usr/wf/bin)
     setenv   WF_SMPATH /usr/wf
     setenv   SMTERM X
     setenv   SM_CONFIGS <directory where config files are stored >
     setenv   BUILDER_DIR    $HOME/.builder_dir
     ```

Note: If the shell variable path is already set in some other line of the *.cshrc* file, add these new lines immediately after the last `set path` line.

   - If you use the Bourne shell (*sh*) or clones, add the following lines to *.profile*:

     ```
     PATH=$PATH:/usr/wf/bin
     WF_SMPATH=/usr/wf
     SMTERM=X
     SM_CONFIGS=<directory where config files are stored >
     BUILDER_DIR=$HOME/builder_dir
     export PATH WF_SMPATH SMTERM SM_CONFIGS BUILDER_DIR
     ```

5. **Log out of the user account.**

Repeat steps 1 through 5 for each user account that needs to run Site Manager.

Verifying Site Manager Installation

To verify the Site Manager installation and environment:

1. **Log in to a user account that you set up for Site Manager:**
2. **Start the window environment.**
3. **Verify the Site Manager installation by entering:**

   wfchkinst

   If the installation was successful, the workstation displays the message:

   ```
   Installation is complete and correct!
   ```

4. **Verify the Site Manager environment by entering:**

   wfchkenv

   If the environment is correctly configured, the workstation displays the message:

   ```
   Your environment seems to have been set up correctly.
   ```

Repeat steps 1 through 4 for each user account that has Site Manager installed.

Note: If your environment variables are incorrect, you receive an error message to reset the variables.

Starting Site Manager

To start the Site Manager application:

1. **Log in with a user account that has been set up for Site Manager operation.**
2. **Start the window environment.**
3. **Change to a directory with read/write privileges where Site Manager can save configuration and other files.**

   For example, the following command changes to the directory */home/siteman/config_files*:

   cd /home/siteman/config_files
4. **Activate Site Manager by entering the following command:**

   wfsm -a *<router_IP_address >* **&**

   <router_IP_address> is the IP address of the router's initial interface.

   For example, the following command starts Site Manager and connects to a router with the IP address 192.168.125.34:

   wfsm -a 192.168.125.34 &

   The Site Manager window opens (Figure 11-1).

After you successfully install and start Site Manager, see *Configuring and Managing Routers with Site Manager* for more information.

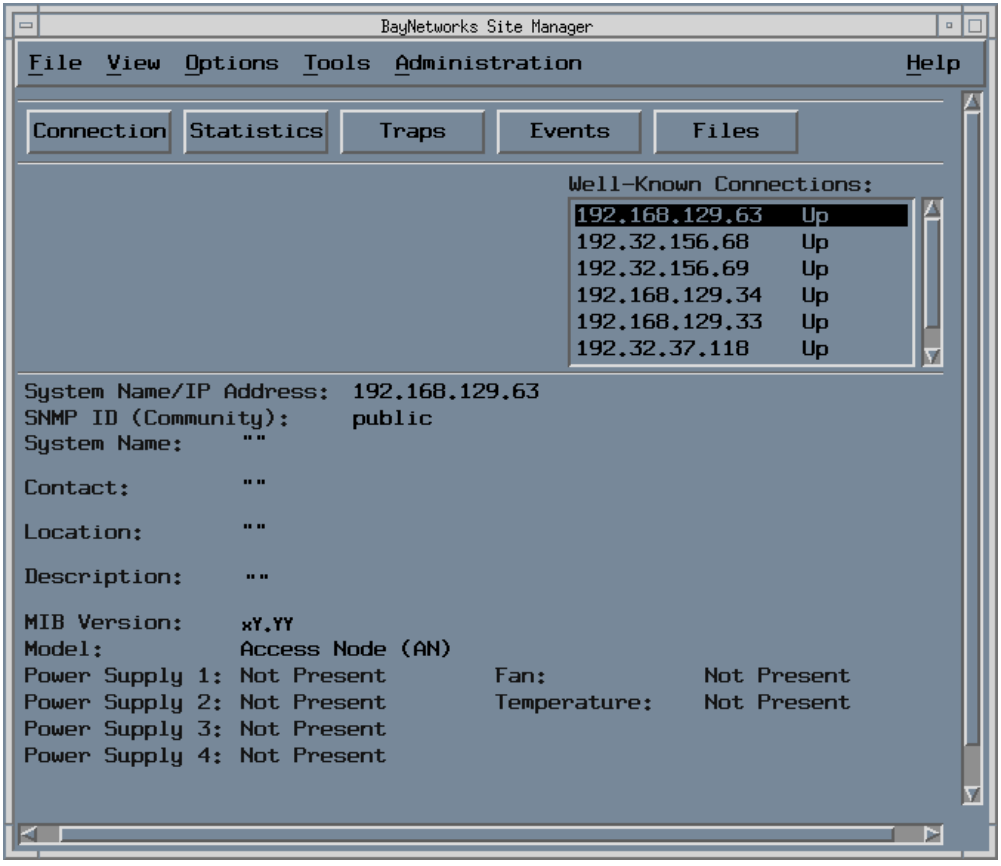

Figure 11-1. Site Manager Window

Starting Site Manager from NetView for AIX

Read this section if you plan to install or are currently running the NetView for AIX application on your IBM workstation.

After you install Site Manager on a workstation running NetView, exit NetView and enter **ovw -fields** at the command line to integrate Site Manager with the NetView application and update the symbols. Do this instead of using the Update Symbols option on the NetView Site Manager menu.

To start a Site Manager session from the IP Internet window menu bar in NetView:

1. **Open a view containing the icon of the router that you want to configure using Site Manager.**

   The IP Internet window opens with a map of your internetwork.

2. **Click on the icon of the router you want to configure.**

3. **From the Tools menu, choose Site Manager (Figure 11-2).**

   The Site Manager window opens with a list of tools.

4. **If the Site Manager tools are dimmed, delete the router from NetView so that it can be rediscovered.**

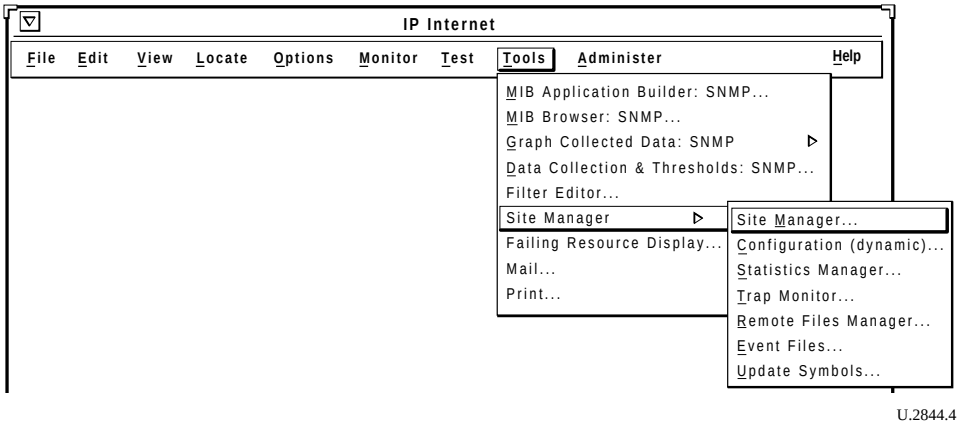

Figure 11-2. Starting a Site Manager Session from NetView

If you install NetView for AIX *after* you install Site Manager software, follow these steps to integrate Site Manager with the NetView for AIX application.

1. **Change to the */usr/wf* directory.**

2. **Reexecute the Site Manager installation script by entering:**

   . / WFSM_INSTALL

Follow these steps any time you reinstall NetView for AIX.

Chapter 12
Installing Site Manager on an HP 9000 Workstation

Site Manager is a graphical user interface for router configuration and management over an IP network. To install Site Manager on an HP 9000 workstation, review the following topics:

Topic	Page
System Requirements	12-2
Loading Site Manager Software	12-2
Setting Up Site Manager User Accounts	12-4
Verifying Site Manager Installation	12-5
Starting Site Manager	12-6

System Requirements

To run Site Manager, your HP 9000 workstation must meet the following hardware and software requirements:

- Supported workstations
  - -- HP 9000 Series 700 and 800
- Supported operating system
  - -- HP-UX 10.20, including the complete *services* (network services) directory
- Window environment
  - -- CDE 1.0.1
- 32 MB of RAM
- 95 MB of free disk space
- 32 MB of swap space (64 MB recommended)
- Network adapter appropriate for your network
- CD-ROM drive

Loading Site Manager Software

Load the Site Manager software on the HP 9000 workstation as follows:

- Mount a CD-ROM drive.
- Install the software.
- Unmount the drive.

Note: The command for mounting the CD-ROM drive varies depending on your system, for example, the number of CD-ROM drives. If the suggested mount command fails, consult your operating system documentation.

Mounting a CD-ROM Drive

To mount a CD-ROM drive:

1. **Insert the appropriate CD and drive tray into the CD-ROM drive.**
2. **Log in as root by entering:**

   su
3. **At the password prompt, enter your root password.**
4. **If a subdirectory or file system does not already exist for the CD, create one by entering**

   mkdir /cdrom
5. **Mount the CD-ROM drive by entering:**

   /etc/mount /dev/dsk/*c0t2d0* **/cdrom**

   c0t2d0 is the CD-ROM drive's address.

Installing the Software

To install Site Manager software:

1. **As root, change to the CD-ROM mountpoint by entering:**

   cd /cdrom
2. **Run the script to load Site Manager software by entering:**

   ./"INSTALL.SH;1"

   Type the command in all uppercase letters. The installation process does the following:

   - Lists the directories that contain enough space to install Site Manager. Accept the default or specify the directory you want to use.
   - Executes the Site Manager installation script, *WFSM_INSTALL*.

   When the installation is finished, your workstation displays the message:

   ```
   Site Manager Installation Complete.
   ```

Note: If you see the message `OvwDbInit failed`, OpenView is not installed. See "Starting Site Manager from OpenView" on page 12-7 for information.

Unmounting the CD-ROM Drive

To unmount a CD-ROM drive, enter:

```
cd /
umount /cdrom
```

Setting Up Site Manager User Accounts

To set up individual Site Manager users on the HP 9000 workstation:

1. **Press Control-d to exit the root account.**
2. **Log in to the user account.**
3. **Create the directory for the Site Manager Image Builder application by entering:**

   ```
   mkdir   $HOME/.builder_dir
   ```

4. **Edit the user account setup file as follows:**

   - If you use the C shell *(csh)* or clones, add the following lines to *.cshrc*:

     ```
     set path = ($path   /usr/wf/bin)
     setenv   WF_SMPATH /usr/wf
     setenv   SMTERM X
     setenv   SM_CONFIGS <directory where config files are stored >
     setenv   BUILDER_DIR    $HOME/.builder_dir
     ```

Note: If the shell variable path is already set in some other line of the *.cshrc* file, add these new lines immediately after the last `set path` line.

   - If you use the Bourne shell *(sh)* or clones, add the following lines to *.profile*:

     ```
     PATH=$PATH:/usr/wf/bin
     WF_SMPATH=/usr/wf
     SMTERM=X
     SM_CONFIGS=<directory where config files are stored >
     BUILDER_DIR=$HOME/.builder_dir
     export   WF_SMPATH SMTERM  SM_CONFIGS  BUILDER_DIR
     ```

5. **Log out of the user account.**

Repeat steps 1 through 5 for each user account that needs to run Site Manager.

Verifying Site Manager Installation

To verify the Site Manager installation and environment:

1. **Log in to a user account that you set up for Site Manager.**
2. **Start the window environment, for example, CDE.**
3. **Verify the Site Manager installation by entering:**

   wfchkinst

   If the installation was successful, the workstation displays the message:

   ```
   Installation is complete and correct!
   ```

4. **Verify the Site Manager environment by entering:**

   wfchkenv

   If the environment was correctly configured, the workstation displays the message:

   ```
   Your environment seems to have been set up correctly.
   ```

Repeat steps 1 through 4 for each user account that has Site Manager installed.

Note: If your environment variables are incorrect, you receive an error message to reset the variables.

Starting Site Manager

To start the Site Manager application:

1. **Log in with a user account that has been set up for Site Manager operation.**
2. **Start the window environment.**
3. **Change to a directory with read/write privileges where Site Manager can save configuration and other files.**

   For example, the following command changes to the directory */home/siteman/config_files*:

   cd /home/siteman/config_files

4. **Activate Site Manager by entering the following command:**

   wfsm -a *<router_IP_address >* **&**

   <*router_IP_address*> is the IP address of the router's initial interface.

   For example, the following command starts Site Manager and connects to a router with the IP address 192.168.125.34:

   wfsm -a 192.168.125.34 &

   The Site Manager window opens (Figure 12-1).

After you successfully install and start Site Manager, see *Configuring and Managing Routers with Site Manager* for more information.

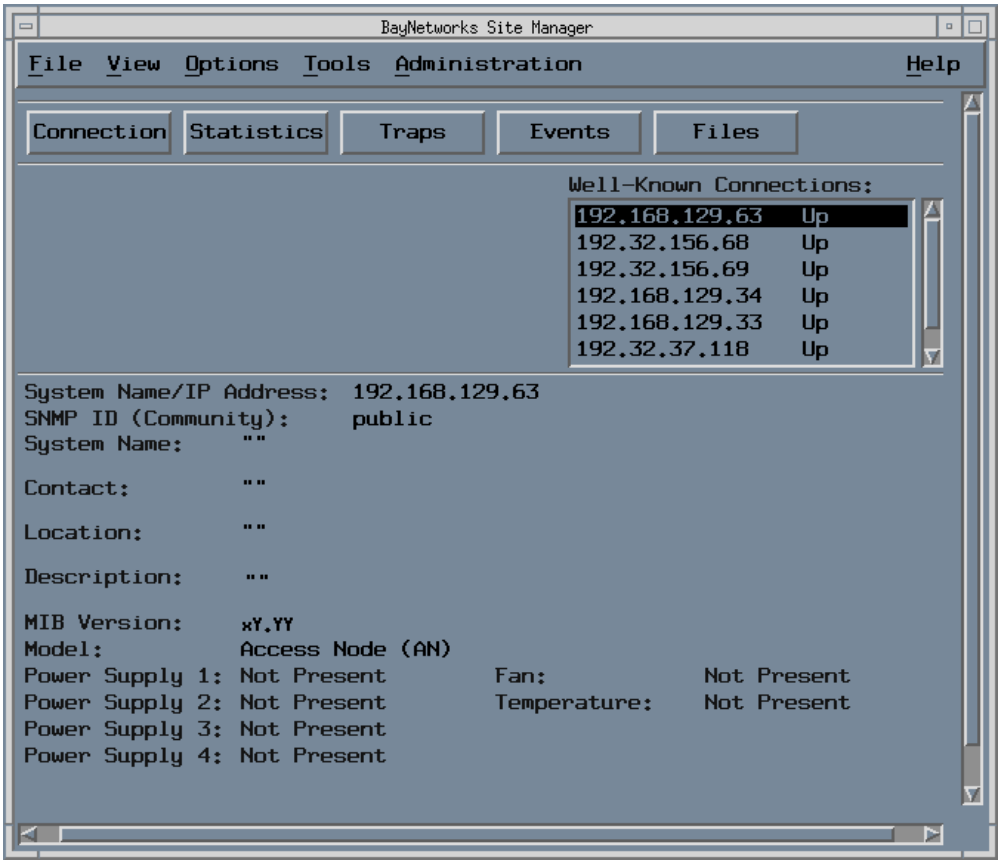

Figure 12-1. Site Manager Window

Starting Site Manager from OpenView

Read this section if you plan to install or are currently running the HP OpenView application on your HP 9000 workstation.

After you install Site Manager on a workstation running HP OpenView, you must exit HP OpenView and enter **ovw -fields** at the command line to integrate Site Manager with the OpenView application and update the symbols. Do this instead of using the Update Symbols option on the OpenView Site Manager menu.

To start a Site Manager session from the IP Internet window menu bar in OpenView:

1. **Open a view containing the icon of the router that you want to configure using Site Manager.**

   The IP Internet window opens with a map of your internetwork.

2. **Click on the icon of the router you want to configure.**

3. **From the Tools Menu, choose Site Manager (Figure 12-2).**

   The Site Manager window opens with a list of tools.

4. **If the Site Manager options are dimmed, delete the router from OpenView so that it can be rediscovered.**

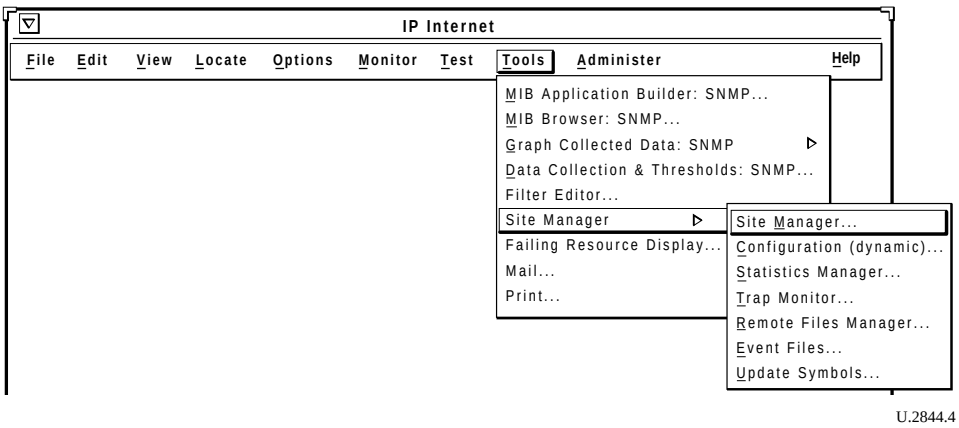

Figure 12-2. Starting a Site Manager Session from OpenView

If you install OpenView *after* you install Site Manager software, follow these steps to integrate Site Manager with the OpenView application.

1. **Change to the */usr/wf* directory.**

2. **Reexecute the Site Manager installation script by entering:**

   . / WFSM_INSTALL

Follow these steps any time you reinstall OpenView.

Appendix A
Sample Installation Script

This appendix presents a sample execution of the *install.bat* script to add an initial IP router interface to a network. See Chapter 3 for the Quick-Start Worksheet you use to prepare network information before running the script. Your script will vary, depending on your router model and network configuration.

```
------------------------------------------------------------------------------
---
                                  Release 12.10
                               Copyright 1993-1998
------------------------------------------------------------------------------
---


                                  Introduction
                                  ------------

This part of the Quick-Start procedure configures the initial IP network
interface on the router. You perform this procedure so that the router can
communicate with the network management station

Each step of this procedure is further described in the Quick-Start Guide. As you
perform the procedure, refer to the Quick-Start Guide for additional helpful
information and examples.

When you are finished with this procedure, the router will be able to communicate
with the network management station over the IP network. You are then ready to
install the network management software, as described in the Quick-Start Guide.

Each procedure step requires you to do one of the following things:
        1. Enter a number that corresponds to a selection.
        2. Enter 'y' for Yes;  'n' for No; 'q' for Quit.
        3. Enter a word or phrase referred to as a "text string"
        4. Enter <Return> to accept default displayed in [].
```

```
You must press the <Return> key after entering one of the above responses.


Press <Return> to Continue, q<Return> to Quit:

--------------------------------------------------------------------------------

                    Preliminary Information You Need to Know
                    ----------------------------------------

Before you begin this procedure, you should gather the network
information listed below:

You Need to Know This Information:                For Example:
---------------------------------                 ------------
Type of Link Module connecting the router's       DSDE
IP network interface to the Site Manager.

Slot number where the Link Module resides.        2

Communication type and connector number           Ethernet XCVR1

IP address of initial IP network interface        192.32.10.189

Subnet mask of initial IP network interface       255.255.255.224

IP address of Site Manager workstation            192.32.10.100

Do you wish to continue? (y/n)[y]: y
--------------------------------------------------------------------------------

Step 1. Specify the slot number where the Link Module resides.

             Slot Menu for Link Module
             -------------------------

  Slot       Link Module      Processor Module
  ----       -----------      ----------------
    1        SRML             SRMF
    2        Empty            FRE2
    3        WF_FDDI_2M       FRE2
    4        DST-4/16         FRE2
    5        QE/NF            FRE2

Enter the slot number [3]: 5
```

```
--------------------------------------------------------------------------
Step 2. Specify the Link Module and network interface information for
the initial IP connection to the Site Manager.

Link Module: QE/NFConnector Menu

       Connector Menu
       --------------
       1. XCVR1
       2. XCVR2
       3. XCVR3
       4. XCVR4

Enter connector number [1]:

Recommended Circuit Name: E51

Enter circuit name [E51]:

------------------------------------------------------------------------

Step 3. Specify the IP configuration information for the network
interface.

                              IP Configuration Menu
                              ---------------------

IP address format:###.###.###.###

IP subnetwork mask format: ###.###.###.###
Example: 255.255.255.0


Enter IP address in dotted decimal notation: 192.32.125.34


Enter IP subnetwork mask in dotted decimal notation: 225.225.225.0


Is the router connected to the same local area network as the Site Manager
workstation? (y/n)[n]:
```

Since the router is not on the same network as the Site Manager workstation an IP Routing Protocol must be configured in order to manage the box remotely

```
 IP Routing Protocol Configuration Menu
 --------------------------------------

  1. RIP
  2. OSPF
  3. Static Route to Site Manager.

Enter Routing Protocol Number [1]:


------------------------------------------------------------------------

                                RIP Configuration
                                  Default Route
                                -----------------

RIP will listen to a specific route to the network or subnet where Site Manager
is located. If you also would like RIP to listen to the default route (0.0.0.0)
then answer 'y' below. The default route is useful when no specific route is
available in the RIP updates received by this router.

Should RIP listen to the default route? (y/n)[n]:

------------------------------------------------------------------------

                                RIP Configuration
                                   RIP Version
                                -----------------

Specify the version of RIP. The default is to run RIP1. RIP2 runs RIP2 without
the automatic aggregation of subnets that RIP1 provides. RIP2_AGGR provides the
automatic aggregation of subnets for RIP2.

1. RIP1
2. RIP2
3. RIP2_AGGR

Enter Routing Protocol Number [1]:



RIP Configuration Complete

------------------------------------------------------------------------------
```

```
                        SNMP Community Management Menu
                        ------------------------------

Setting up SNMP community management is optional.

It allows you to limit control of this router to a single Site Manager
workstation at a given IP address. The default is to allow any Site Manager from
any workstation to manage and to configure the router.

Note: You can later configure this using Site Manager.

Do you wish to set SNMP community management? (y/n)[n]: y

Enter IP address of Site Manager workstation: 192.32.20.12


Enter SNMP management community name [public]:


------------------------------------------------------------------------------
Step 4. Select TFTP default volume.

                            TFTP Default Volume Menu
                            ------------------------

NVFS File System:

VOL STATE       TOTAL SIZE   FREE SPACE    CONTIG FREE SPACE
-----------------------------------------------------------------
3: FORMATTED       8388608       2677986       2677986

Enter volume number [3]:

TFTP default volume is 3:
```

```
--------------------------------------------------------------------------------
Step 5. Select FTP default volume.

                                    FTP Menu
                                    --------

Do you want to enable FTP? (y/n)[n]: y


NVFS File System:

VOL STATE    TOTAL SIZE   FREE SPACE    CONTIG FREE SPACE
-------------------------------------------------------------
3: FORMATTED  8388608       2677986       2677986

Enter volume number [3]:

FTP default volume is 3:

--------------------------------------------------------------------------------
Step 6. Enable TELNET

                  Enable the Technician Interface via TELNET
                  ------------------------------------------

Do you want to enable TI TELNET? (y/n)[n]: y



TI TELNET enabled.

--------------------------------------------------------------------------------
Step 7. Enable HTTP

                          Enable the HTTP (Web) Server
                          ----------------------------

Do you want to enable the HTTP (Web) server? (y/n)[n]: y

HTTP server enabled.
```

```
--------------------------------------------------------------------------------
                              Configuration Summary
                              ---------------------

Link Module:  QE/NF
Connector:    1
Slot:         5
Circuit Name: E51
IP address:   192.32.125.34
IP subnetwork mask: 225.225.225.0
Routing Protocol: RIP1
Default Rt. Listen: No
TFTP Default Volume: 3:
FTP Default Volume: 3:
TI TELNET:    Yes
HTTP Server:  Yes

Press [RETURN] to continue:


--------------------------------------------------------------------------------
Step 8. Specify a name for the configuration file.

                          Save configuration to a file.
                          -----------------------------

The Quick-Start configuration of the router is now complete and active.

Do you wish to save this configuration to a file? (y/n)[y]:


Default file name is startup.cfg on the current volume.

NOTE: Do *NOT* name this file 'config'. Later, you may wish to rename
this file 'config' after you perform a named boot and verify its operation.

Enter file name [startup.cfg]:

--------------------------------------------------------------------------------
Step 9. Test this initial IP interface configuration.

                               TEST IP Interface
                               -----------------

IP Interface 192.32.125.34 is up.

Testing local IP interface.
```

```
ping -IP 192.32.125.34 -r5
IP ping: 192.32.125.34 is alive (size = 16 bytes)
IP ping: 192.32.125.34 is alive (size = 16 bytes)
IP ping: 192.32.125.34 is alive (size = 16 bytes)
IP ping: 192.32.125.34 is alive (size = 16 bytes)
IP ping: 192.32.125.34 is alive (size = 16 bytes)

This test attempts to ping the Site Manager workstation.

NOTE: If routing has not yet converged, an attempt
to ping the Site Manager workstation may fail. If this happens, you may either
enter a new IP address or quit and wait a short period of time and try again from
the TI command line.

Type q<return> to cancel this test.

Enter IP address of Site Manager workstation: 192.32.20.12

IP Interface 192.32.20.12 is alive.

--------------------------------------------------------------------------------

Quick-Start Installation Completed.

Exiting...
```

Appendix B
Sample ATM Installation Script

This appendix presents a sample execution of the *install.bat* script to add an initial IP router interface to an ATM network using a LANE service type. See Chapter 3 for the Quick-Start ATM Worksheet to prepare your network information. Your script will vary, depending on your router model, ATM service type, and network configuration.

```
--------------------------------------------------------------------------------
                                  Release 12.10
                               Copyright 1993-1998
--------------------------------------------------------------------------------

                                  Introduction
                                  ------------

This part of the Quick-Start procedure configures the initial IP
network interface on the router.  You perform this procedure so that
the router can communicate with the network management station.

Each step of this procedure is further described in the Quick-Start Guide.
As you perform the procedure, refer to the Quick-Start Guide for
additional helpful information and examples.

When you are finished with this procedure, the router will be able to
communicate with the network management station over the IP network. You
are then ready to install the network management software, as described
in the Quick-Start Guide.

Each procedure step requires you to do one of the following things:
        1. Enter a number that corresponds to a selection.
        2. Enter 'y' for Yes;  'n' for No; 'q' for Quit.
        3. Enter a word or phrase referred to as a "text string"
        4. Enter <Return> to accept default displayed in [].
```

```
You must press the <Return> key after entering one of the above responses.

Press <Return> to Continue, q<Return> to Quit:
--------------------------------------------------------------------------------

                    Preliminary Information You Need to Know
                    ----------------------------------------

Before you begin this procedure, you should gather the network
information listed below:

You Need to Know This Information:                For For Example:
---------------------------------                 ------------
Type of Link Module connecting the router's       DSDE
IP network interface to the Site Manager.

Slot number where the Link Module resides.        2

Communication type and connector number           Ethernet XCVR1

IP address of initial IP network interface        192.32.10.189

Subnet mask of initial IP network interface       255.255.255.0

IP address of Site Manager workstation            192.32.10.100

Do you wish to continue? (y/n)[y]:
--------------------------------------------------------------------------------

Step 1.  Specify the slot number where the Link Module resides.

                      Slot Menu for Link Module
                      -------------------------

 Slot    Link Module        Processor Module
 ----    -----------        ----------------
    1    SRML               Empty
    2    QE/NF              FRE2
    3    DTOK               FRE2
    4    ATMC_OC3MM         ARE
    5    DSDE-1             FRE2

Enter the slot number [2]: 4
```

```
--------------------------------------------------------------------------------
Step 2. Specify the Link Module and network interface information for
        the initial IP connection to the Site Manager.

Link Module: ATMC_OC3MM

Connector Menu
--------------
1. ATM1

Enter connector number [1]:

ATM Service Record Selection Menu
---------------------------------
1. ATM PVC
2. ATM LAN Emulation
3. ATM Logical IP Subnet

Enter ATM Service Record Type [1]: 2

         Configuring LANE ATM Service Record
         -----------------------------------


Enter Signaling Version
-----------------------
1. UNI3.0
2. UNI3.1

Signaling Version [1]: 2


 ATM Signaling UNI3.1 Has Been Enabled
 -------------------------------------------

            ATM Address Configuration
            -------------------------

If you choose Auto Generation, router software will use
combination of MAC address and network prefix queried from server
to generate a unique ATM address.

If you do not choose Auto Generation, please enter a 7-byte
User Part (Mandatory) and a 13-byte Net Prefix (Optional) to
be combined to a 20-byte ATM address.

Do you want Auto Generation of ATM address? (y/n) [y]: n
Please enter ATM address in hex format, omit leading 0x/0X
```

```
Enter User Part (Mandatory), 7 bytes : 1234567765432

Incorrect User Part entered, try again
Please enter ATM address in hex format, omit leading 0x/0X

Enter User Part (Mandatory), 7 bytes : 12345677654321
Enter Net Prefix (Optional), 13 bytes : [] 39000000000000000000000000

Choose Emulated LAN Name.

Press RETURN to accept default ELAN or
type in the name of a previously configured ELAN
into which you wish this LAN Emulation Client to join

Enter Emulated LAN Name, e.g. 01, [DEFAULT]: AAA

Emulated LAN Type Menu
----------------------
1. UNSPECIFIED
2. IEEE8023
3. IEEE8025
-----------------------------------------------------

Choose Emulated LAN Type [1].3


Recommended Circuit Name: ATMSR_1404101.5

Enter circuit name [ATMSR_1404101.5]:
-------------------------------------------------------------------------------

Step 3.  Specify the IP configuration information for the network
         interface.

                              IP Configuration Menu
                              ---------------------

 IP address format:          ###.###.###.###

 IP subnetwork mask format:  ###.###.###.###
                    Example: 255.255.255.0


Enter IP address in dotted decimal notation: 192.168.125.34

Enter IP subnetwork mask in dotted decimal notation: 255.255.255.0
```

```
Is the router connected to the same local area network as
the Site Manager workstation? (y/n)[n]: y


------------------------------------------------------------------------------

                        SNMP Community Management Menu
                        ------------------------------

Setting up SNMP community management is optional.

It allows you to limit control of this router to a single
Site Manager workstation at a given IP address.  The default
is to allow any Site Manager from any workstation to manage
and to configure the router.

Note: You can later configure this using Site Manager.

Do you wish to set SNMP community management? (y/n)[n]:

------------------------------------------------------------------------------
Step 4.  Select TFTP default volume.

                           TFTP Default Volume Menu
                           ------------------------

 NVFS File System:

VOL    STATE      TOTAL SIZE    FREE SPACE    CONTIG FREE SPACE
-----------------------------------------------------------------
 3:    FORMATTED    4194304       3082063          2720387
 4:    FORMATTED   16777216       7433936          6123580

Enter volume number [3]:


TFTP default volume is 3:

------------------------------------------------------------------------------
Step 5.  Select FTP default volume.

                                   FTP Menu
                                   --------

Do you want to enable FTP? (y/n)[n]:
```

```
--------------------------------------------------------------------------------
Step 6.  Enable TELNET

                  Enable the Technician Interface via TELNET
                  ------------------------------------------

Do you want to enable TI TELNET? (y/n)[n]:


--------------------------------------------------------------------------------
Step 7. Enable HTTP

                          Enable the HTTP (Web) Server
                          ----------------------------

Do you want to enable the HTTP (Web) server? (y/n)[n]: y

HTTP server enabled.


--------------------------------------------------------------------------------


                              Configuration Summary
                              ---------------------

Link Module:          ATMC_OC3MM
Connector:            1
Slot:                 4
Circuit Name:         ATMSR_1404101.5
IP address:           192.168.125.34
IP subnetwork mask:   255.255.255.0
TFTP Default Volume:  3:
TI TELNET:            No
HTTP Server:          Yes


Press [RETURN] to continue:

--------------------------------------------------------------------------------
Step 8. Specify a name for the configuration file.

                         Save configuration to a file.
                         -----------------------------

The Quick-Start configuration of the router is now complete and active.

Do you wish to save this configuration to a file? (y/n)[y]:
```

```
Default file name is startup.cfg on the current volume.

NOTE: Do *NOT* name this file 'config'. Later, you may wish to rename
      this file 'config' after you perform a named boot and verify its
      operation.

Enter file name [startup.cfg]:

------------------------------------------------------------------------
Step 9.  Test this initial IP interface configuration.

IP Interface 192.168.125.34 is up.


Testing local IP interface.

ping -IP 192.168.125.34 -r5
IP ping: 192.168.125.34 is alive (size = 16 bytes)
IP ping: 192.168.125.34 is alive (size = 16 bytes)
IP ping: 192.168.125.34 is alive (size = 16 bytes)
IP ping: 192.168.125.34 is alive (size = 16 bytes)
IP ping: 192.168.125.34 is alive (size = 16 bytes)

This test attempts to ping the Site Manager workstation.

NOTE:  If routing has not yet converged, an attempt
       to ping the Site Manager workstation may fail.  If
       this happens, you may either enter a new IP address or
       quit and wait a short period of time and try again from
       the Technician Interface command line.

Type q<return> to cancel this test.

Enter IP address of Site Manager workstation: 192.32.20.12

IP Interface 192.32.20.12 is alive.
...

The router installation procedure has completed.
--------------------------------------------------------------------------------
```

Index

A

access policies, 7-3
ATM
  sample script, B-1
  worksheet, 3-7 to 3-11
authentication failure traps, 7-6

B

baud rate parameter, 2-3
BaySecure FireWall-1, 7-8
BCC
  accessing, 5-2
  configuring routers with, 5-2
  described, 5-2
  using to quick-start router, 5-1
booting, 2-10

C

cables, 2-3
CD
  mounting, 10-3, 11-3, 12-3
  unmounting, 10-4, 11-3, 12-4
circuit worksheet information, 3-4
commands
  BCC, 5-4
  dinfo, 2-8
  dir, 2-8
  Manager, 2-5
  password, 7-2
  show ip circuits, 4-4, 5-13
  show ip routes, 4-5, 5-13
  Technician Interface, 2-7
  wfchkenv, 10-6, 11-5, 12-5
  wfchkinst, 10-6, 11-5, 12-5
  wfsm, 10-7, 11-6, 12-6
config file, 4-3, 5-10, 6-3
configuration file restrictions, 6-3
configuration procedures, 6-2
configuration tools, 6-1
configuring BaySecure FireWall-1, 7-8
connections, remote
  memory cards, 6-4
  out-of-band, 6-4
  Telnet, 6-3
connector worksheet information, 3-4
console operating parameters, 2-2, 2-3
console, cabling, 2-4
console, connecting to router, 2-3
customer support
  programs, xvii
  Technical Solutions Centers, xviii

D

data bits parameter, 2-3
data encryption services, 7-7
dinfo command, 2-8
dir command, 2-8
Domain Manager, 10-8

E

encryption, 7-7
environment, verifying, 10-6, 11-5, 12-5

F

File Manager, 6-2
FireWall-1 security, 7-8
frame relay worksheet information, 3-12
FTP
  turning off, 7-6
  worksheet information, 3-6

G

global IP access policies, 7-3
global services worksheet information, 3-6

H

HP 9000 workstation
  installing Site Manager on, 12-2
  operating with OpenView, 12-7
  system requirements, 12-2
HTTP server
  and BCC, 5-2
  restricting access, 7-7
  worksheet information, 3-6

I

IBM workstation
  installing Site Manager on, 11-2
  operating with NetView for AIX, 11-7
  system requirements, 11-2
Image Builder, 7-6
initializing the router, 2-10
installation files, 2-9
installation script
  commands, 4-2
  running, 4-2
  sample, A-1, B-1
installing Site Manager
  on a PC, 8-4
  on a SPARCstation, 10-3
  on a workstation running Windows NT, 9-3
  on an HP 9000 workstation, 12-2
  on an IBM workstation, 11-2
interface connectors and circuits, 3-2
IP access policies, 7-3
IP address, 4-4, 5-13
IP address worksheet information, 3-4
IP policies, 7-3
IP routing configuration, worksheet information, 3-4

L

LAN Emulation ATM
  sample script, B-1
  worksheet information, 3-10
loading Site Manager
  on a PC, 8-4
  on a SPARCstation, 10-3
  on a workstation running Windows NT, 9-3
  on an HP 9000 workstation, 12-2
  on an IBM workstation, 11-2
logical IP ATM worksheet information, 3-11

M

Manager command, 2-5
memory cards, 2-8, 6-4
memory statistics, 2-8
modem connections, 6-4
mounting a CD, 10-3, 11-3, 12-3

N

NETarchitect, 6-2
NetView for AIX, implementation notes, 11-7
network information worksheet, 3-2
NT workstation, installing Site Manager on, 9-1
NVFS (nonvolatile file system), 2-8

O

OpenView implementation notes
  HP 9000 workstation, 10-9
  SPARCstation, 12-7
OSPF configuration worksheet information, 3-5
out-of-band connections, 6-4

P

parity parameter, 2-3

password command, 7-2

PC
- connecting to router, 2-3
- installing Site Manager on, 8-1

physical connector worksheet information, 3-4

physical interface, verifying, 4-4, 5-13

PowerPC
- installing Site Manager on, 11-2
- operating with NetView for AIX, 11-7
- system requirements, 11-2

PPP worksheet information, 3-13

prerequisites for Quick-Start, 2-1

PVC ATM worksheet information, 3-9

Q

Quick-Start
- ATM installation script, B-1
- ATM worksheet, 3-7
- installation files, 2-9
- installation script, 4-2, A-1
- overview, 1-2
- prerequisite steps with the BCC, 5-5
- troubleshooting, 4-4, 5-13
- WAN protocols worksheet, 3-12
- worksheet, 3-2

R

RADIUS, 7-8

read/write access, restricting, 7-3

Remote Authentication Dial-In User Service, 7-8

restricting read/write access, 7-3

RIP configuration worksheet information, 3-5

route verifying, 4-5, 5-13

router network connection example, 3-4

router security, 7-1

router software images, 2-10

RS/6000
- installing Site Manager on, 11-2
- operating with NetView for AIX, 11-7
- system requirements, 11-2

S

secure mode, setting for routers, 7-4

SecurID, 7-6

security, router, 7-1

service type, ATM
- LANE, 3-10
- logical IP, 3-11
- PVC, 3-9

setting up Site Manager users, 10-5, 11-4, 12-4

show ip circuits command, 4-4, 5-13

show ip routes command, 4-5, 5-13

Site Manager
- installing
  - on a PC, 8-4
  - on a SPARCstation, 10-1
  - on a workstation running Windows NT, 9-3
  - on an HP 9000 workstation, 12-1
  - on an IBM workstation, 11-1
- setting up users, 10-5, 11-4, 12-4

slot configuration worksheet information, 3-4

SMDS worksheet information, 3-13

SNMP worksheet information, 3-6

SPARCstation
- installing Site Manager on, 10-1
- operating with OpenView, 10-9
- operating with SunNet Manager, 10-8
- system requirements, 10-2

startup.cfg file, 4-3, 5-10, 6-3

static route configuration, 3-5, 5-8

stop bits parameter, 2-3

SunNet Manager, 10-8

system requirements for Site Manager
- HP 9000 workstation, 12-2
- IBM workstation, 11-2
- NT workstation, 9-1
- PC, 8-1
- SPARCstation, 10-2

T

TCP/IP for Windows, 8-1, 9-1

Technical Solutions Centers, xviii

Technician Interface
- accessing the BCC, 5-2
- assigning password, 7-2
- commands, 2-7
- establishing a session, 2-5

Telnet
- assigning SecurID, 7-6
- turning off, 7-6
- using for remote connections to router, 6-3
- worksheet information, 3-6

terminal settings, 2-2, 2-3

TFTP worksheet information, 3-6

ti.cfg file, booting with, 2-10

traps, authentication failure, 7-6

troubleshooting, Quick-Start installation, 4-4, 5-13

U

unmounting a CD, 10-4, 11-3, 12-4

V

verifying Site Manager installation
- on a SPARCstation, 10-6
- on an HP 9000 workstation, 12-5
- on an IBM workstation, 11-5

volume, locating, 2-8

W

WAN protocols worksheet information, 3-12

wfchkenv command, 10-6, 11-5, 12-5

wfchkinst command, 10-6, 11-5, 12-5

wfsm command, 10-7, 11-6, 12-6

Windows 95, installing Site Manager on PC running, 8-1

Windows NT, installing Site Manager on workstation running, 8-1

windows, Site Manager, 8-5, 9-5, 10-7, 11-7, 12-7

worksheet, network information, 3-2